



D Fin Implant Placement

Menu



Menu



Menu





Menu





Menu





Menu



Measure 1 ½ mm Space from the Canine



Menu





Menu







Menu




Re-measure 1 1/2 mm Space

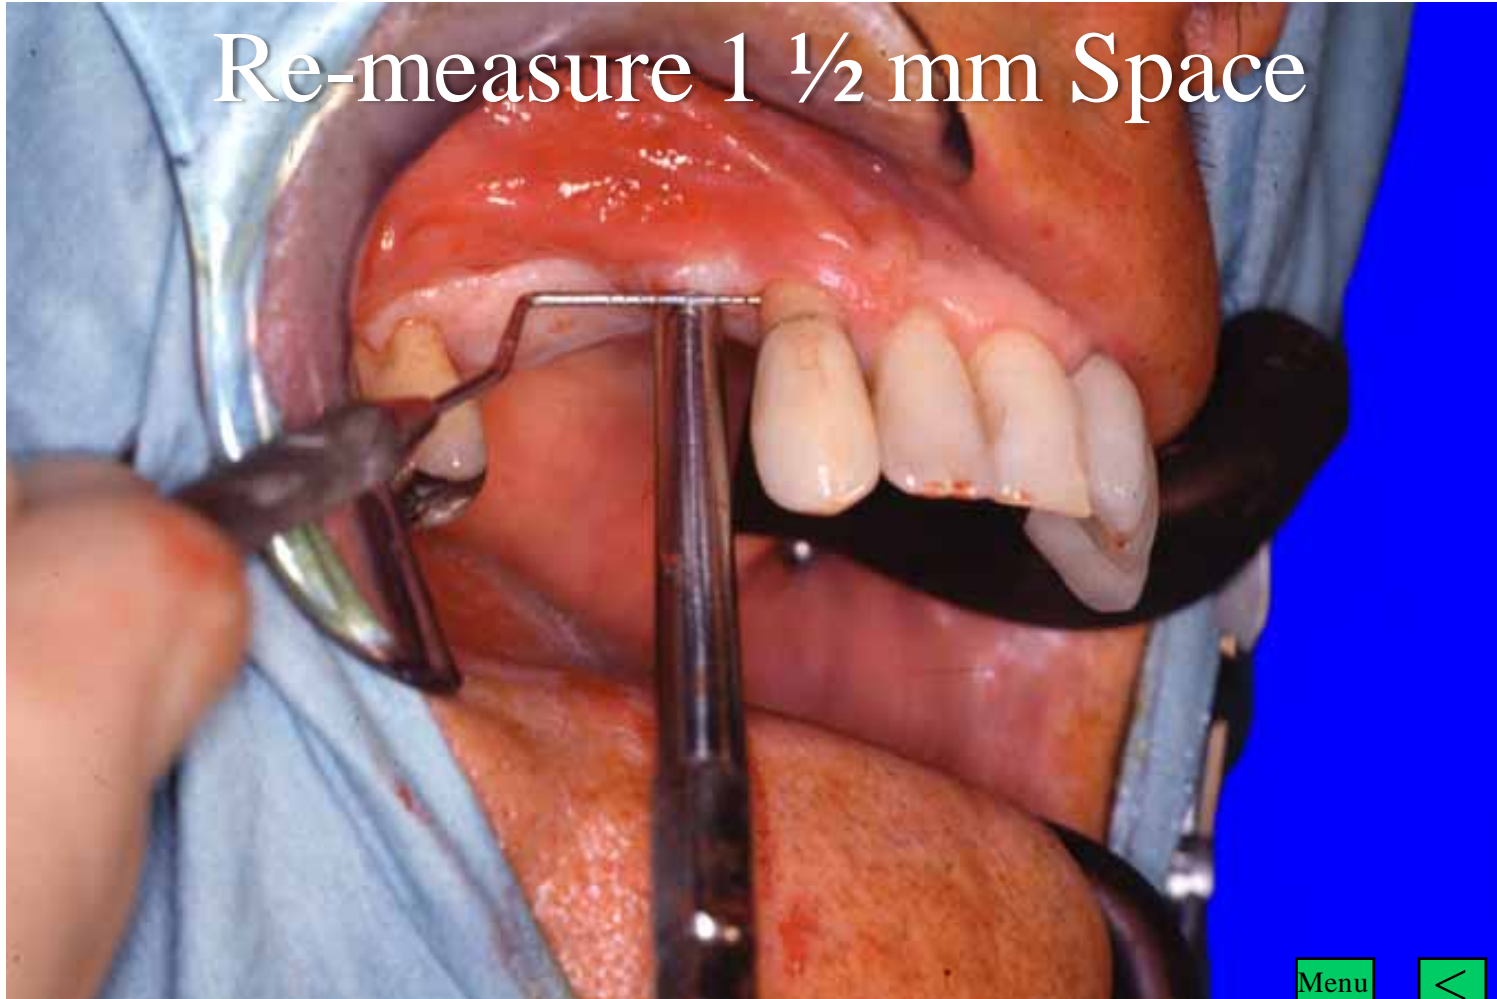

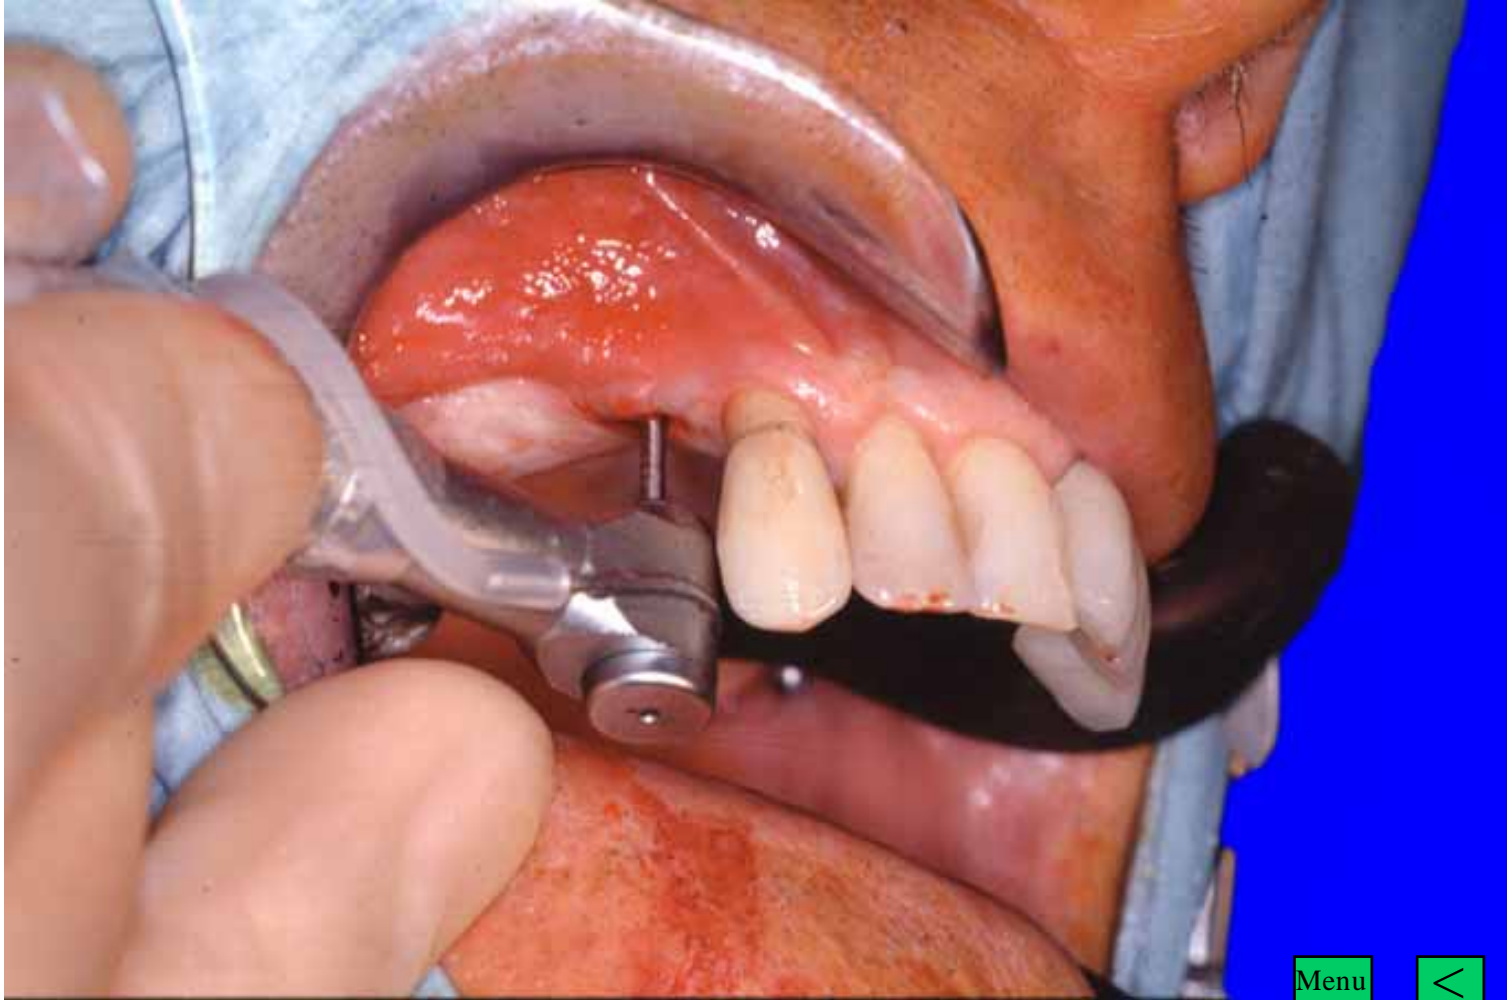

Menu




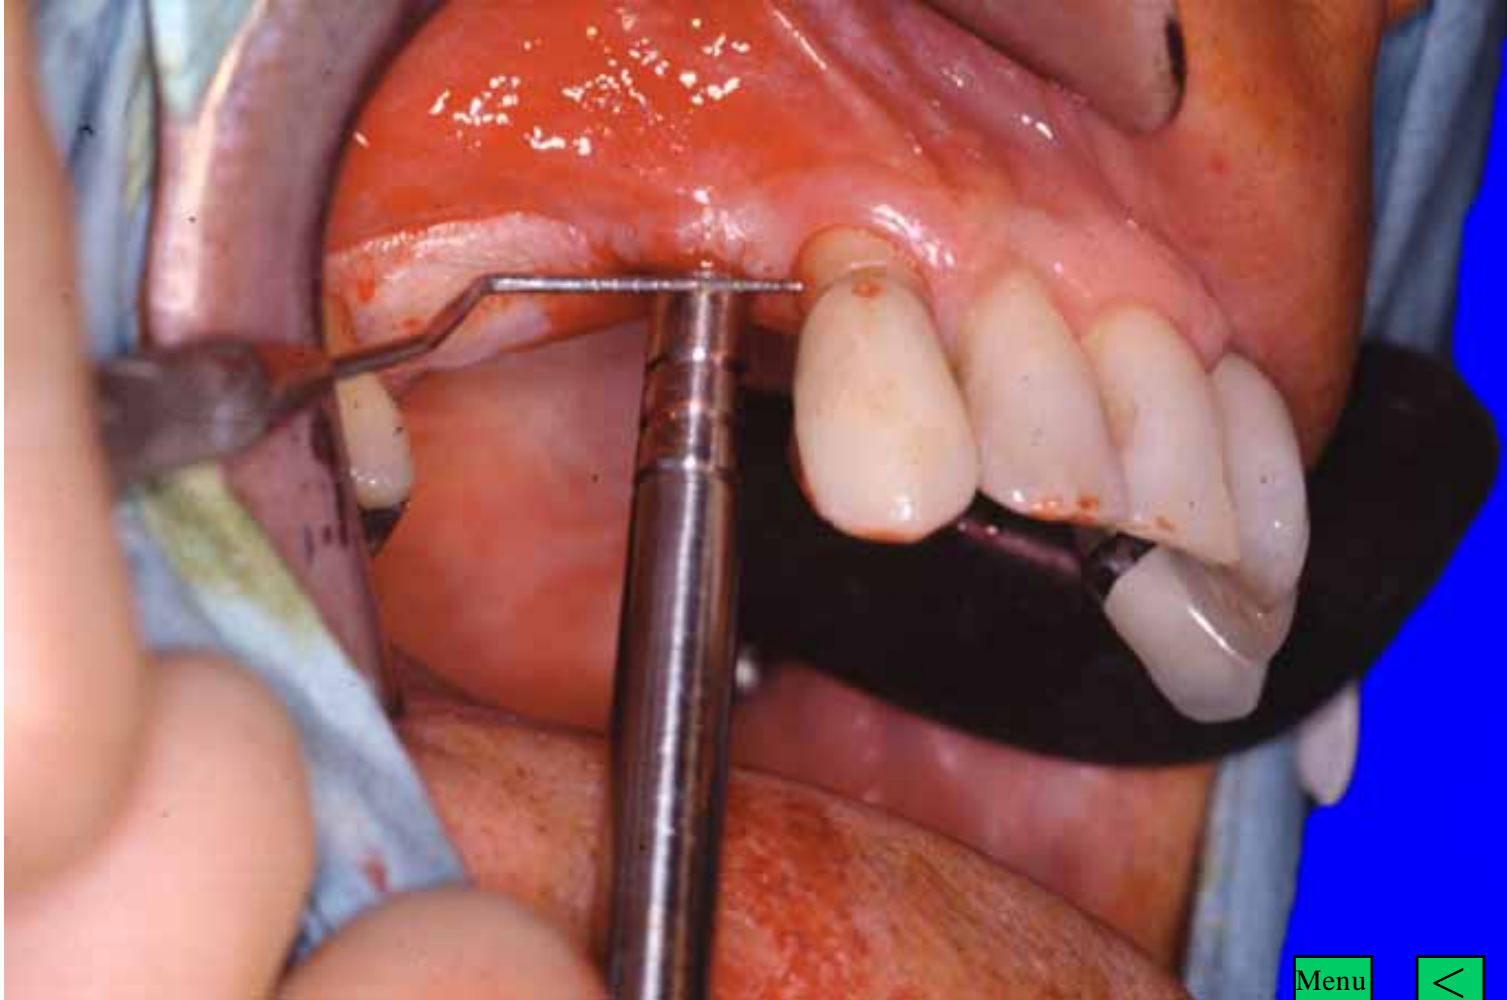


Menu



Site too far Distally

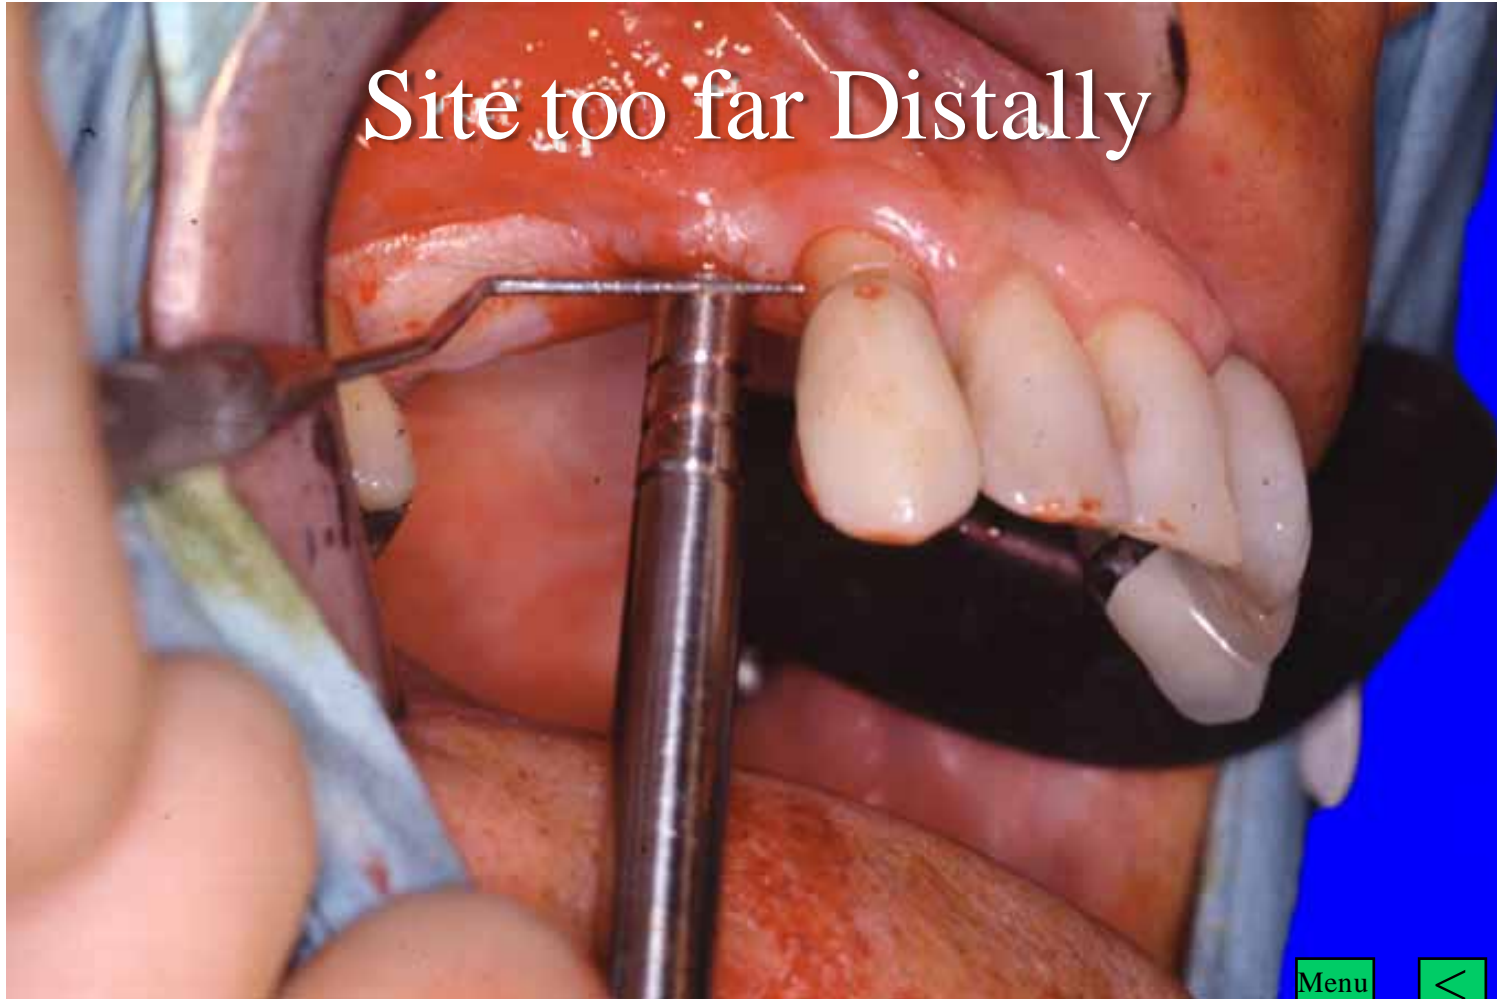

Removing Bone from the Mesial Wall

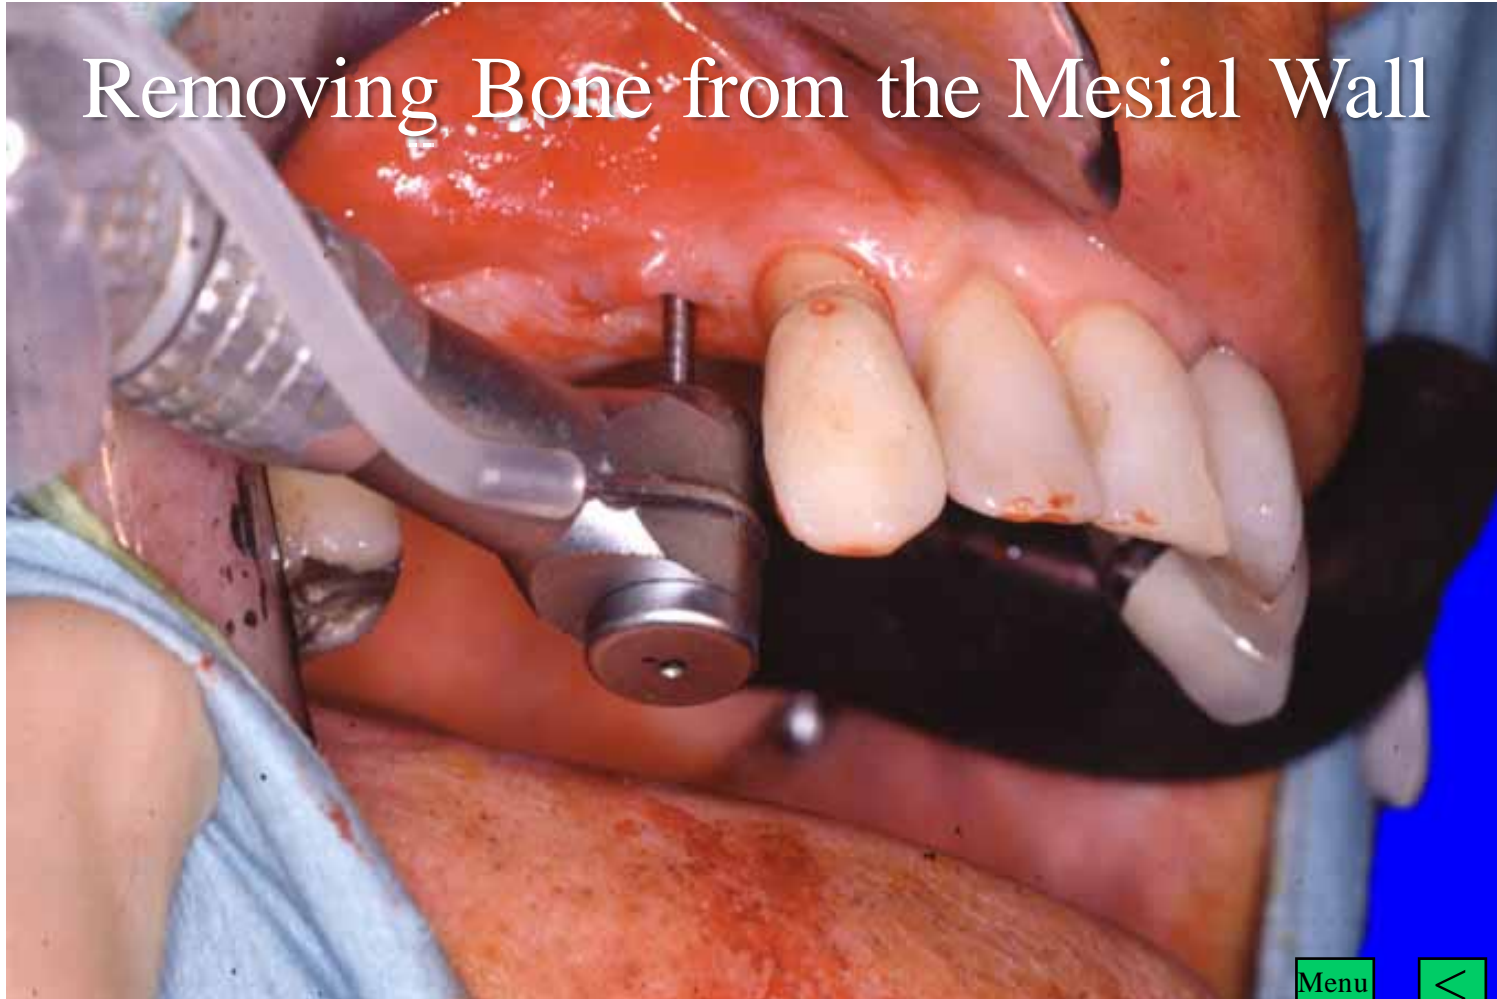


Menu



To move the Site Mesially



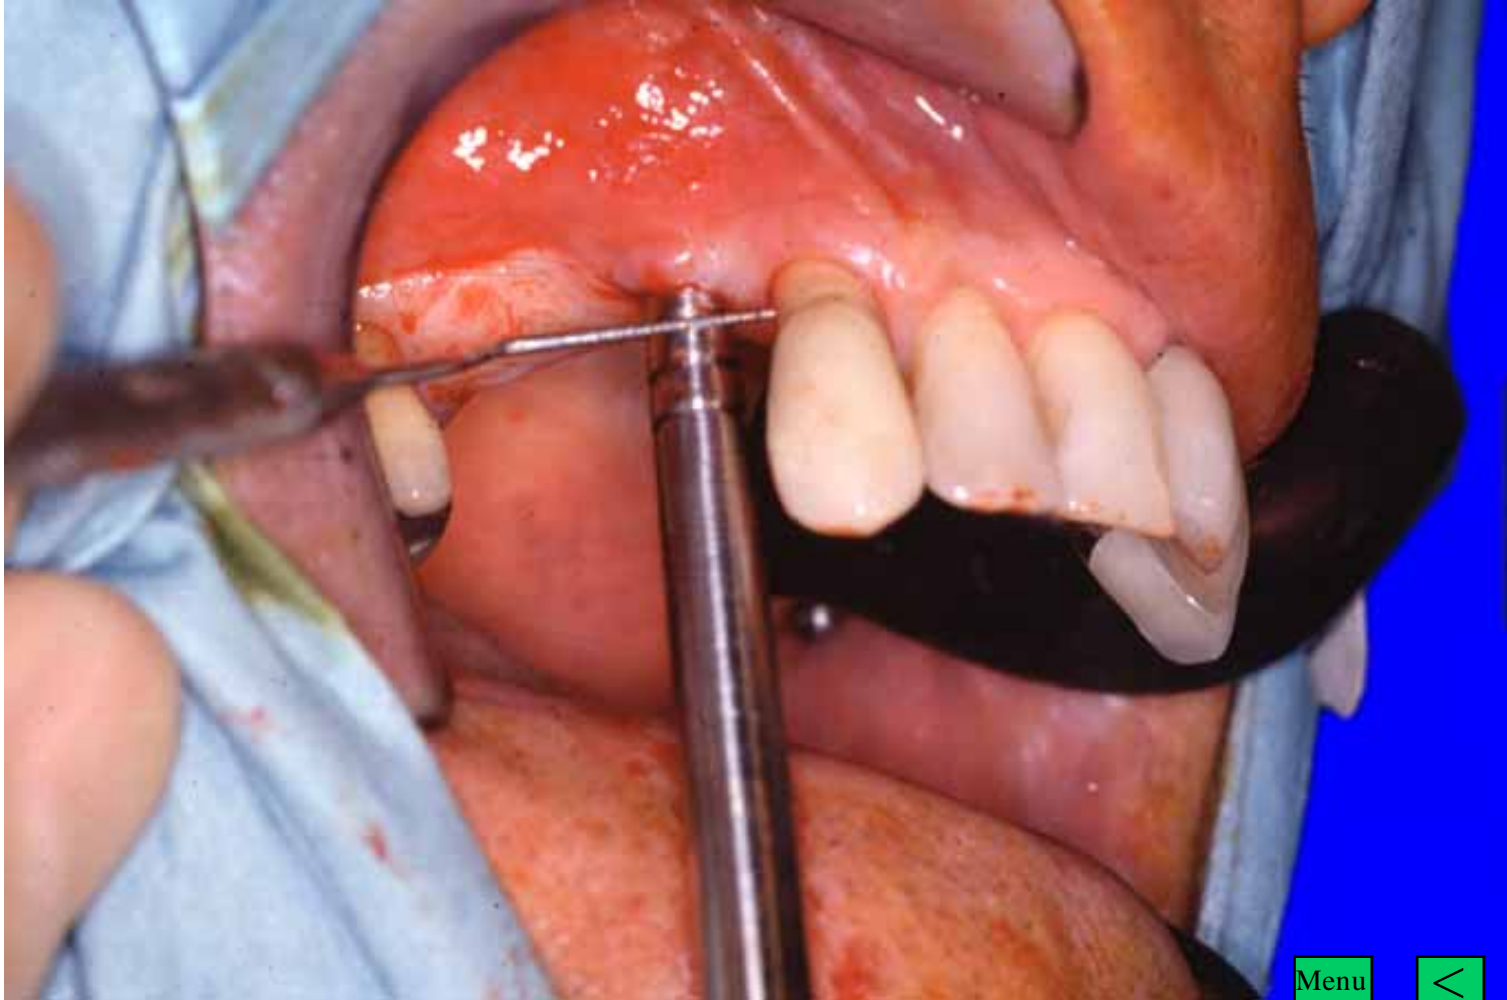


Directing the Wedge Mesially




Menu



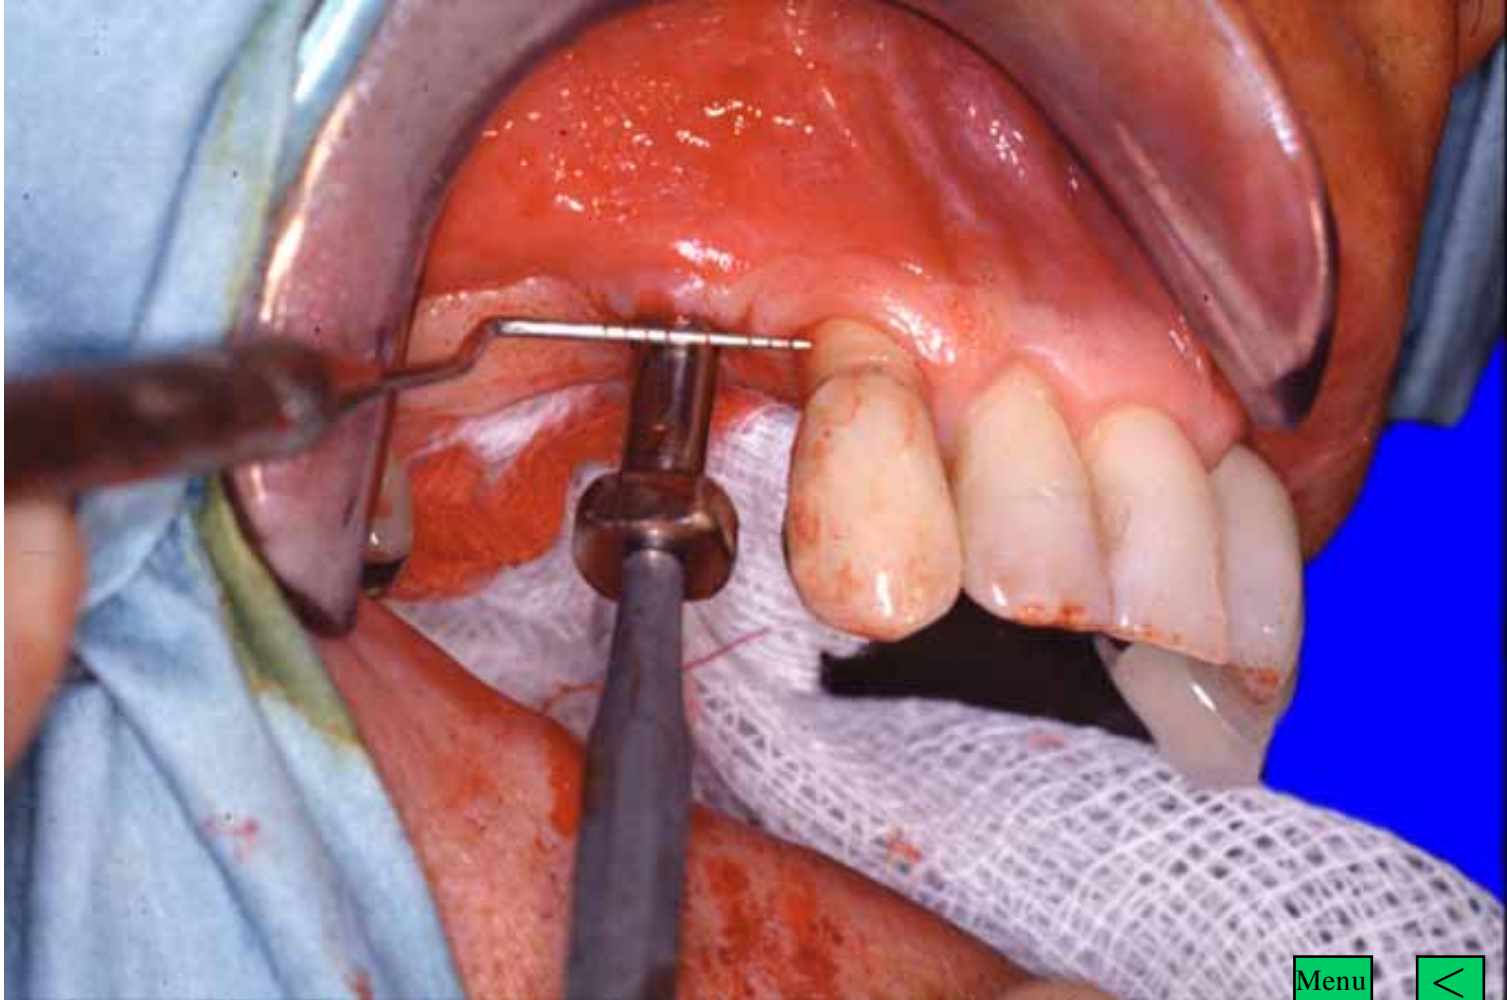

Menu



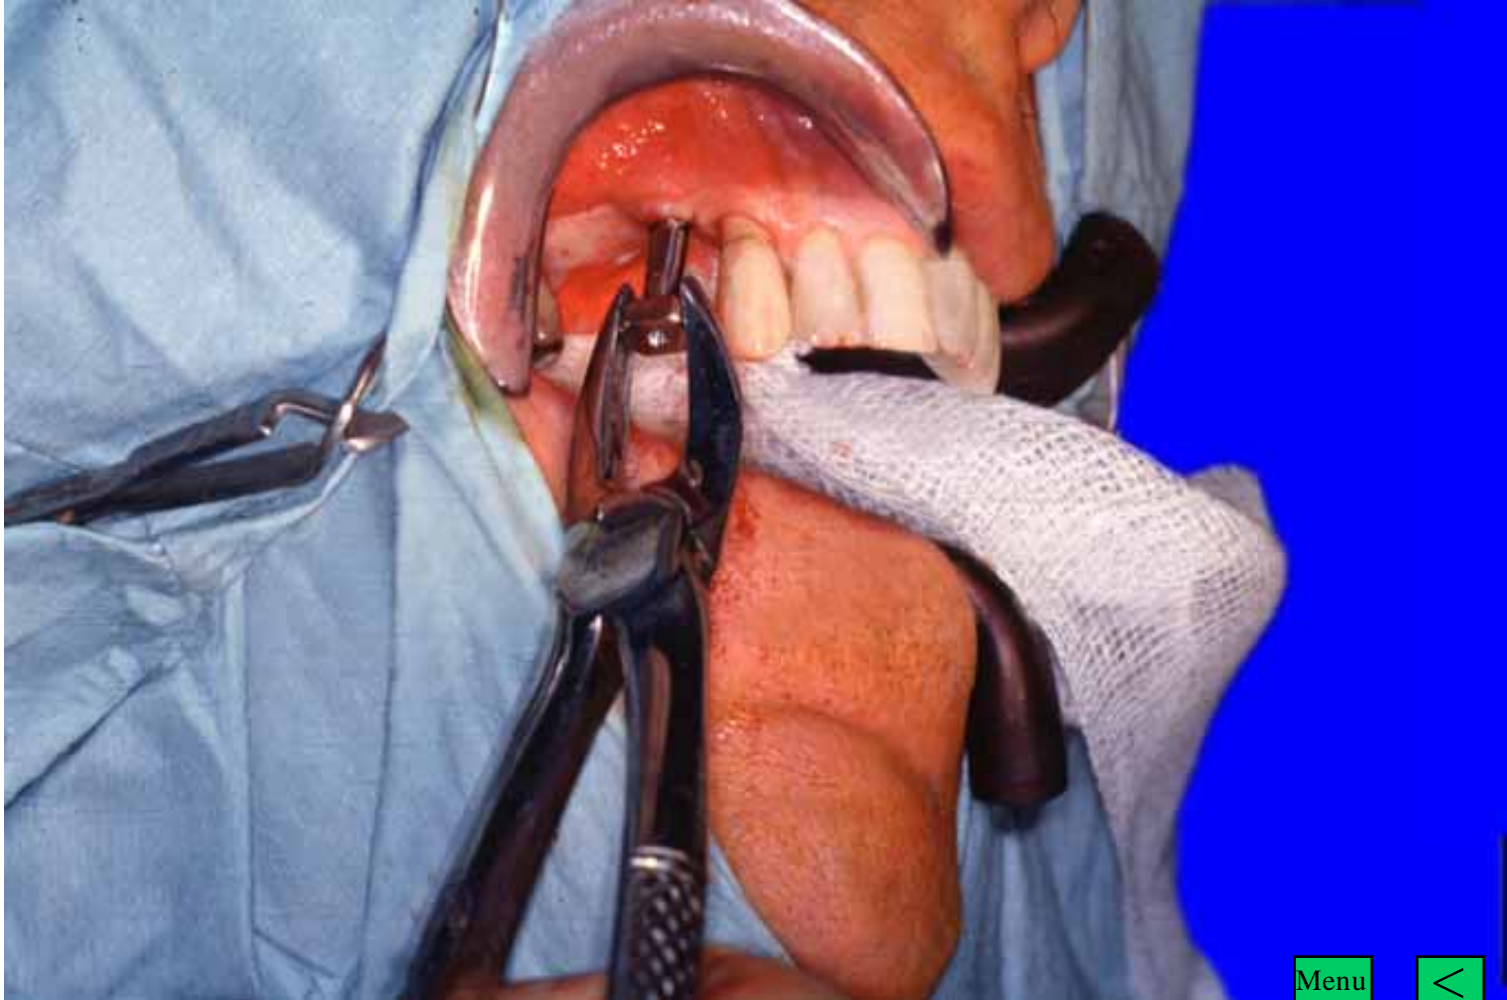

Menu



Removing Bone from the Mesial Wall






Menu





Menu




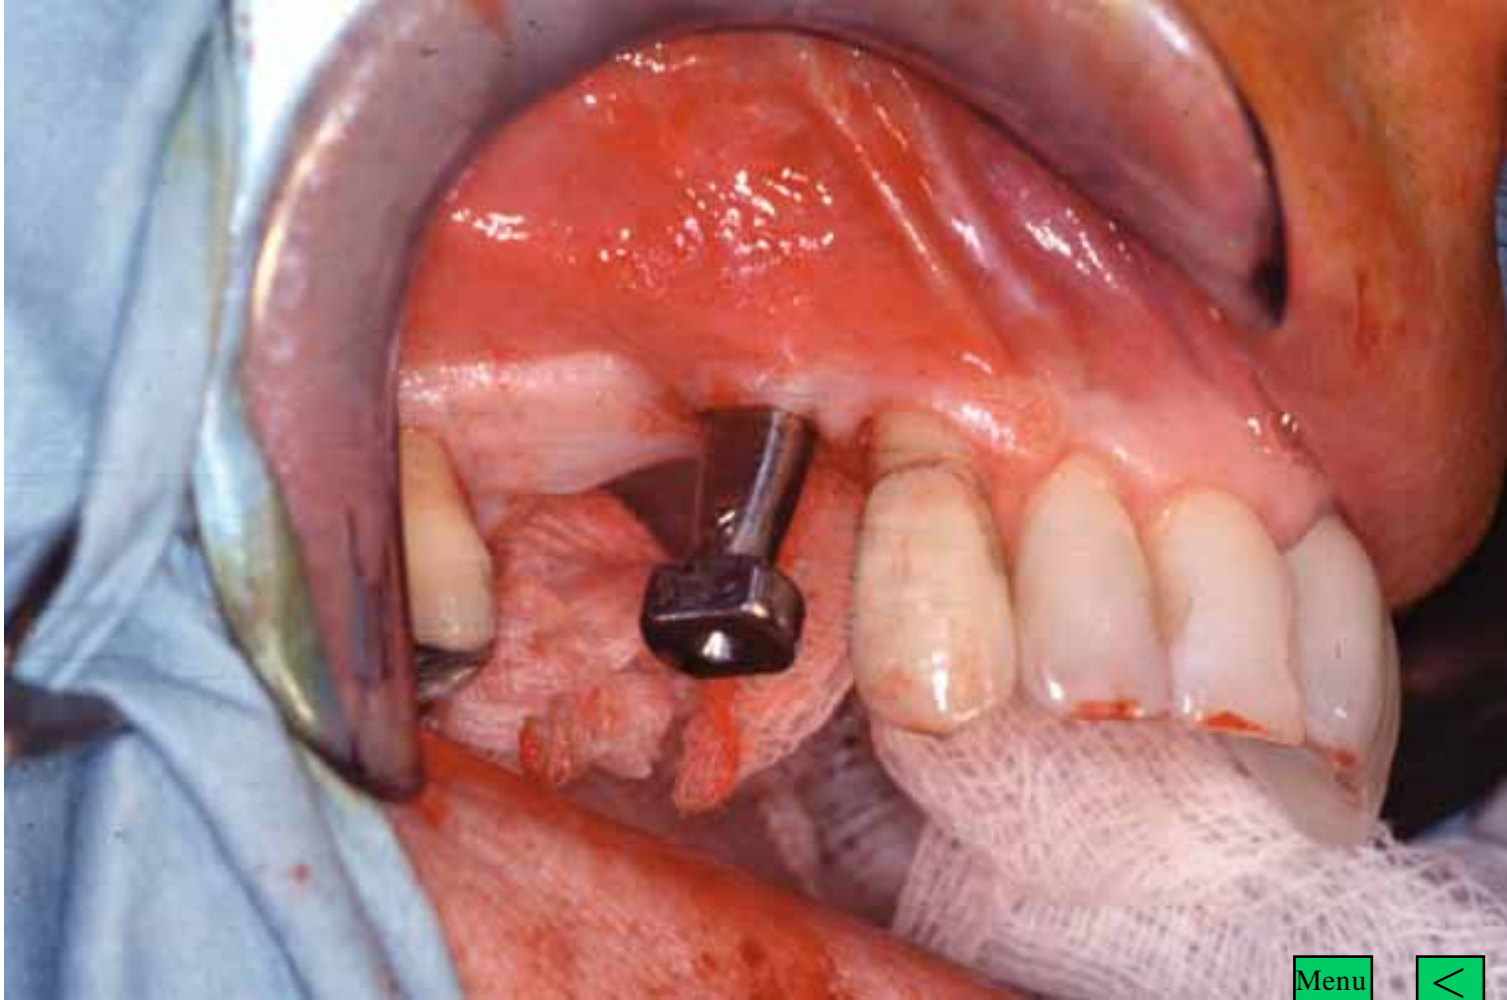

Menu



1 ½ mm Gap

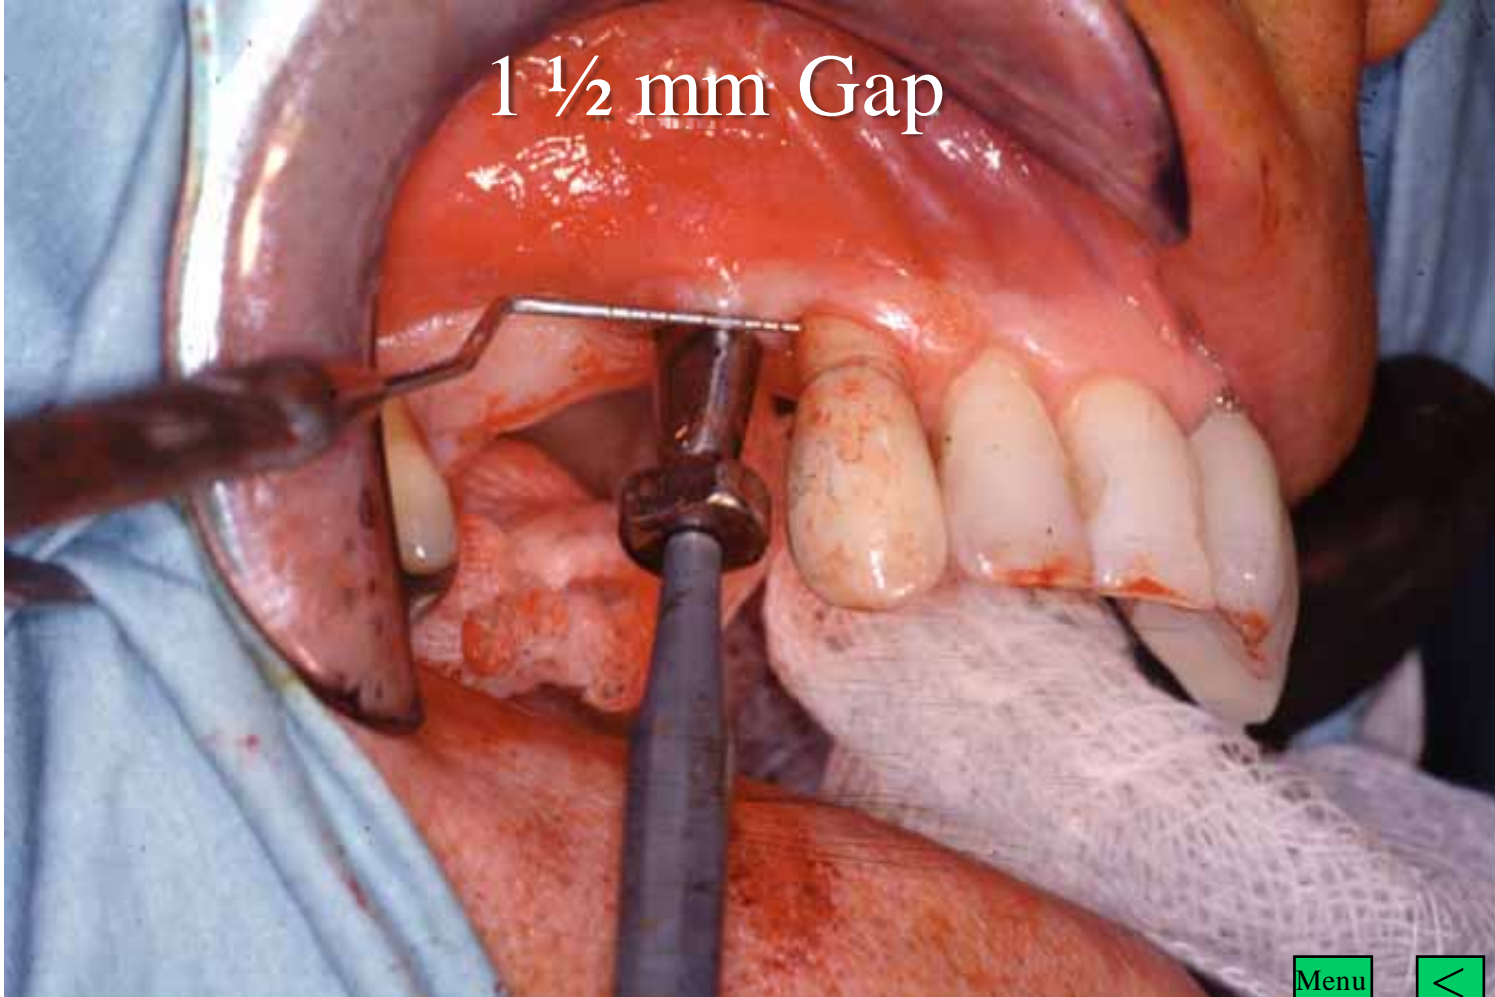


Menu




Osteogen added to the Top Two Fins




Removing the Wedge Expander

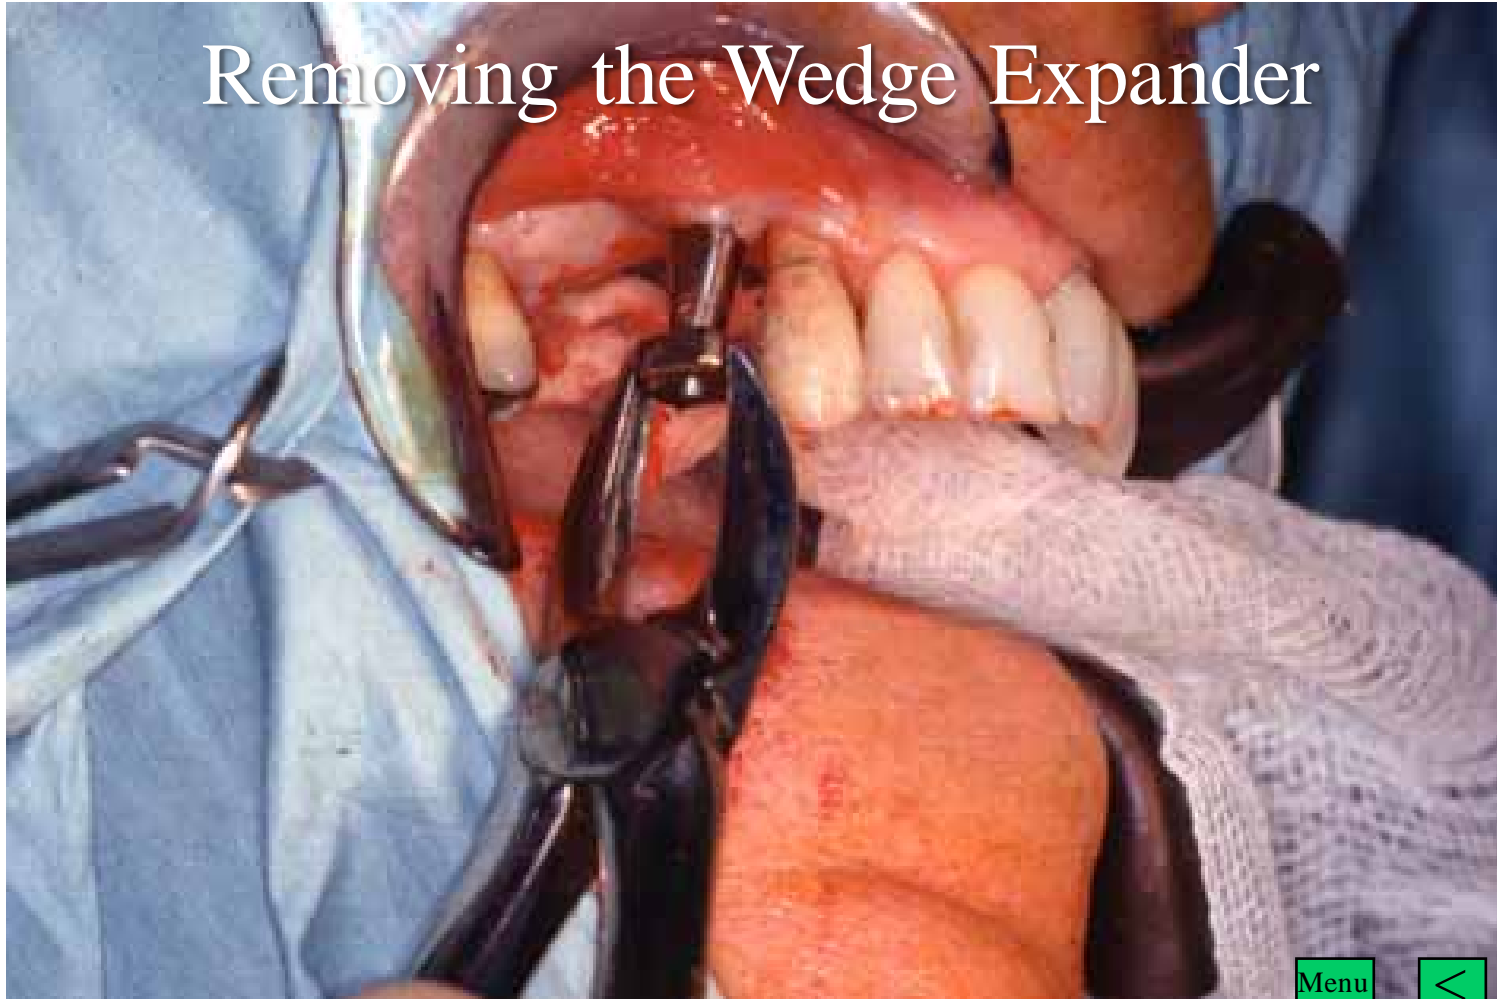

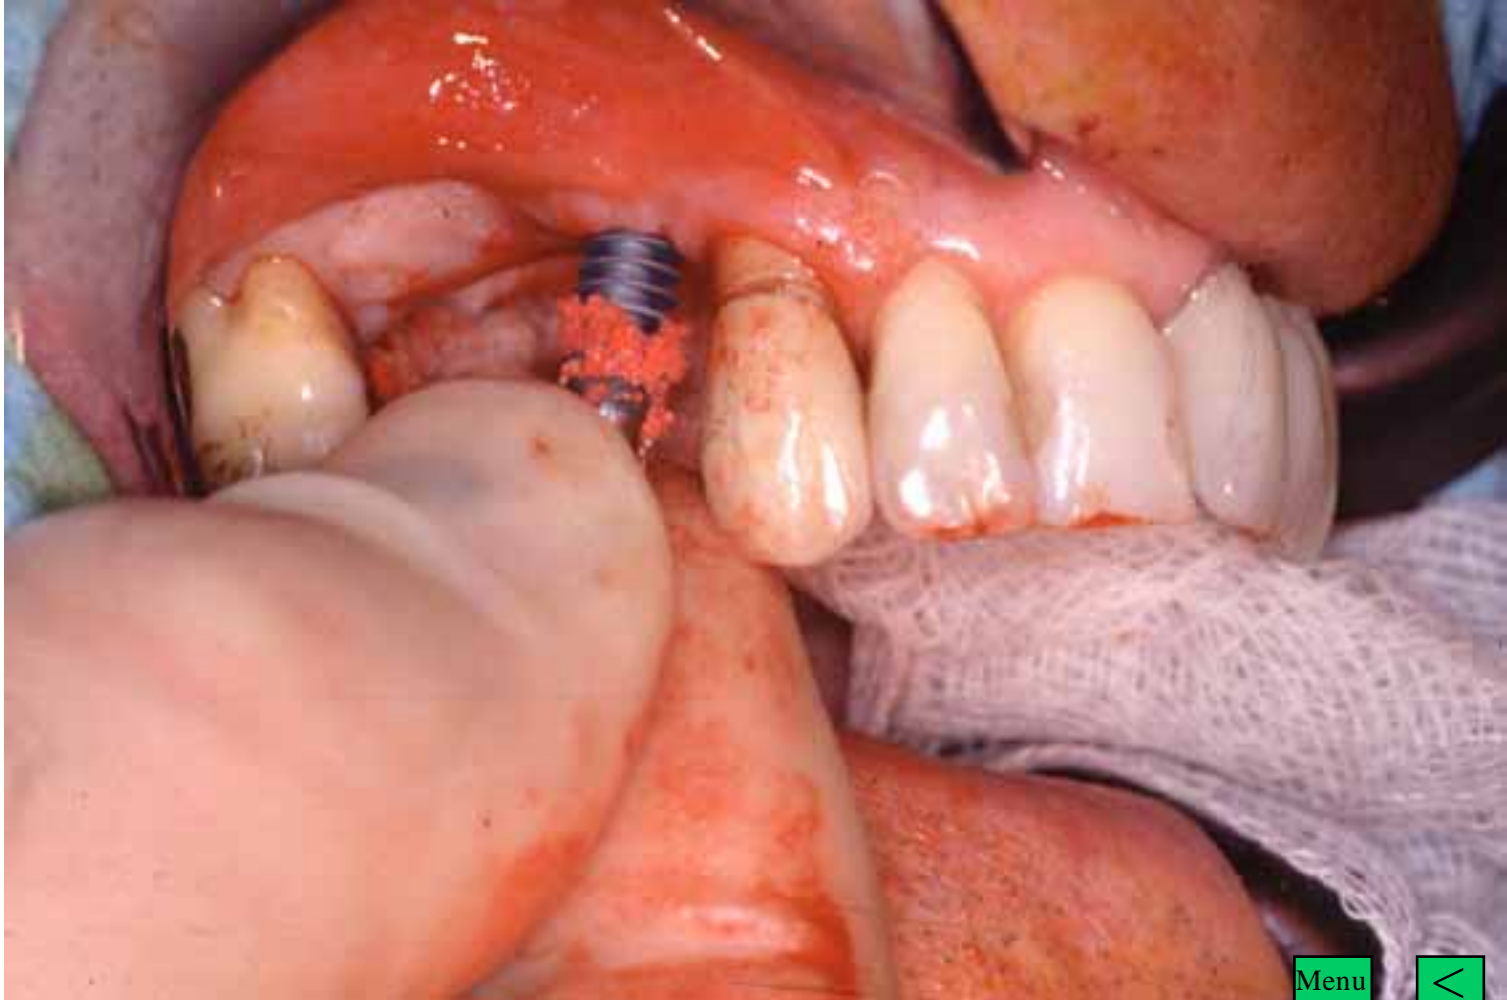


Menu



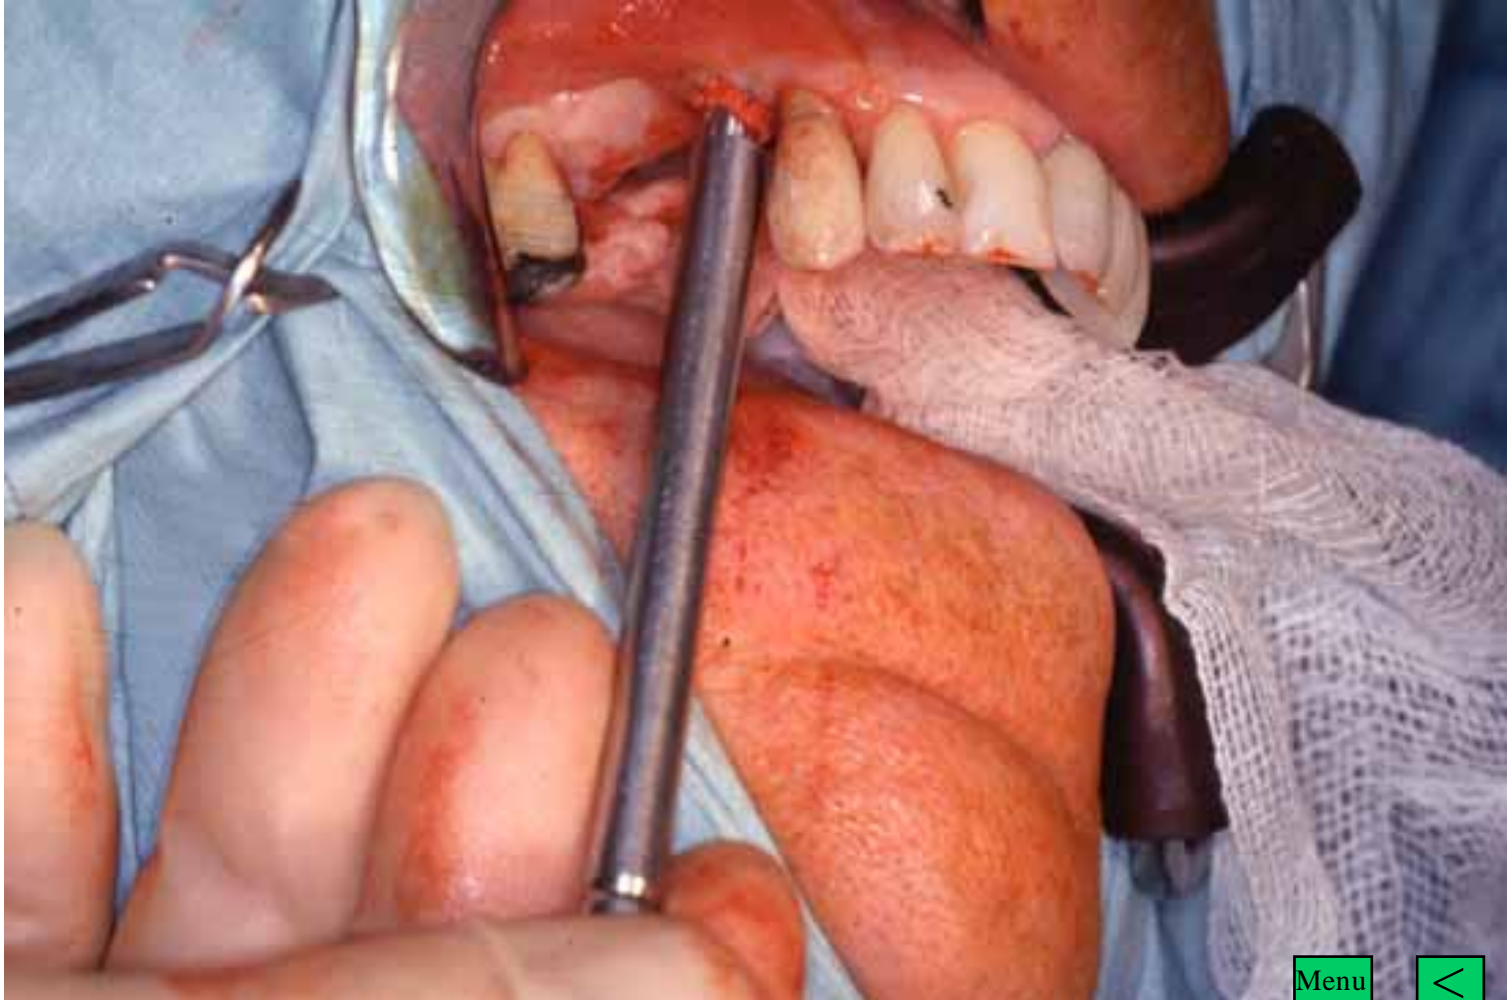


Menu



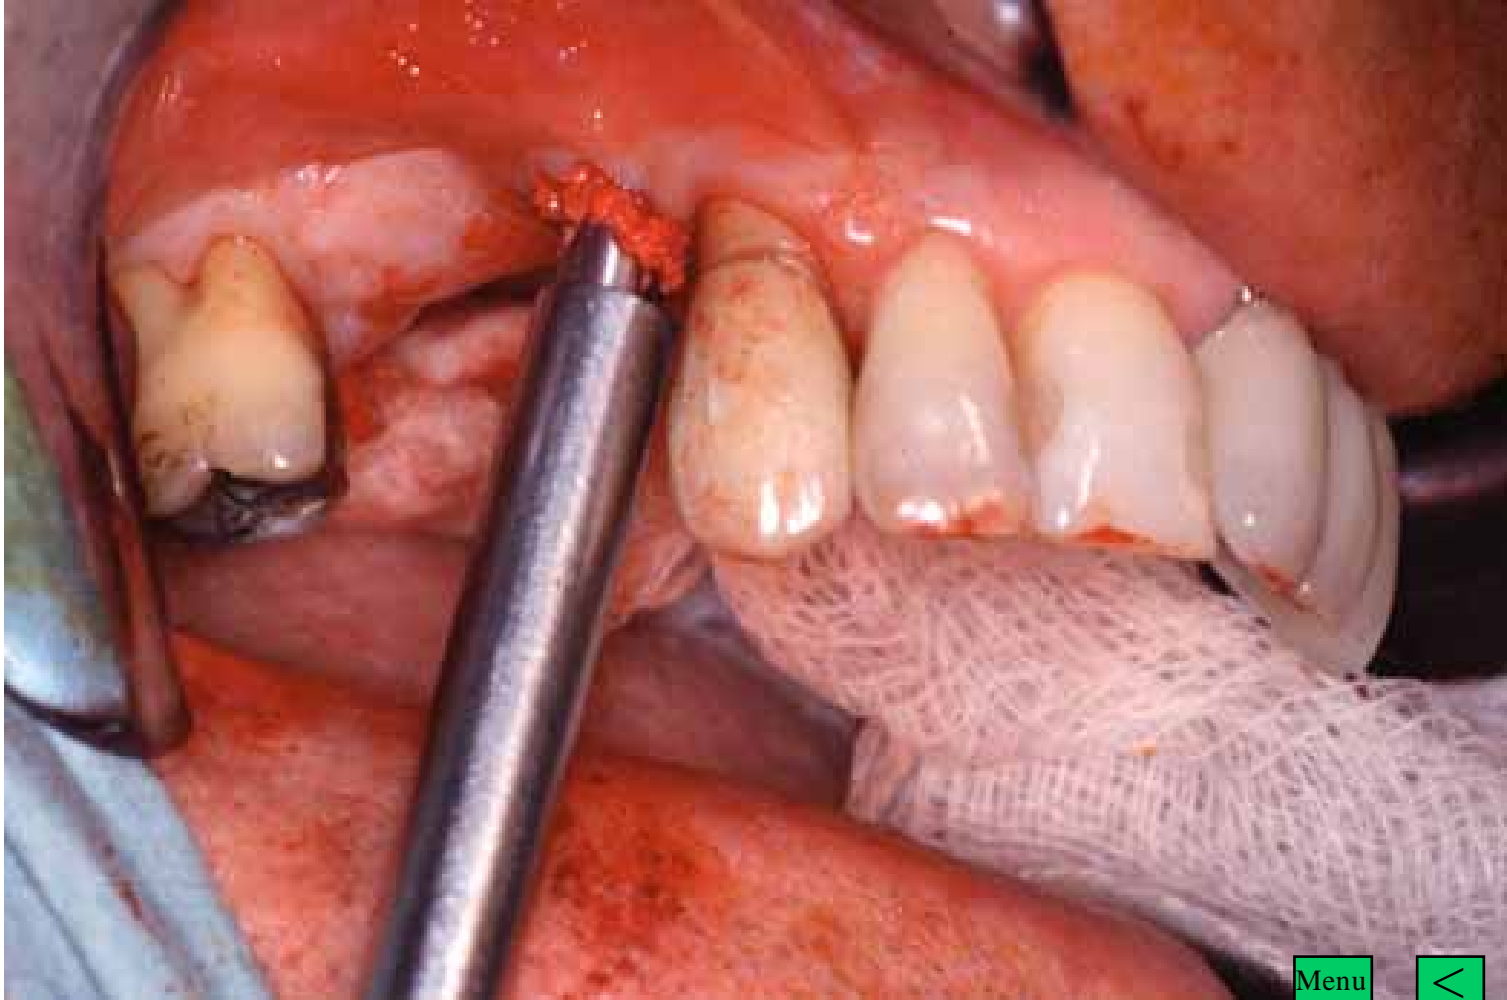


Menu



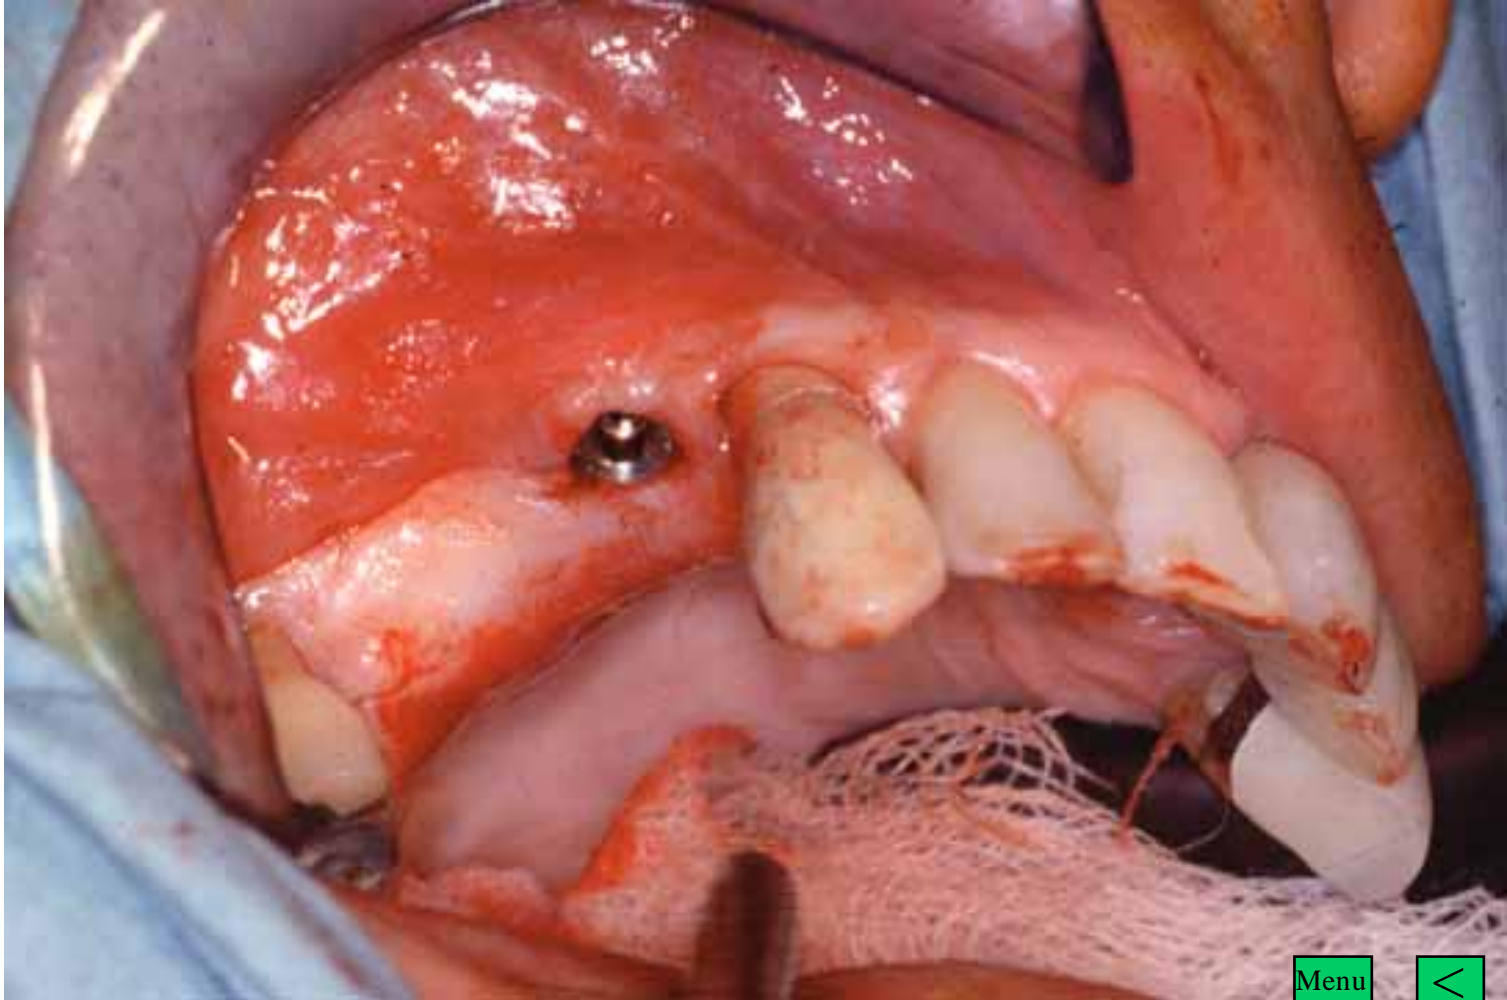

Menu



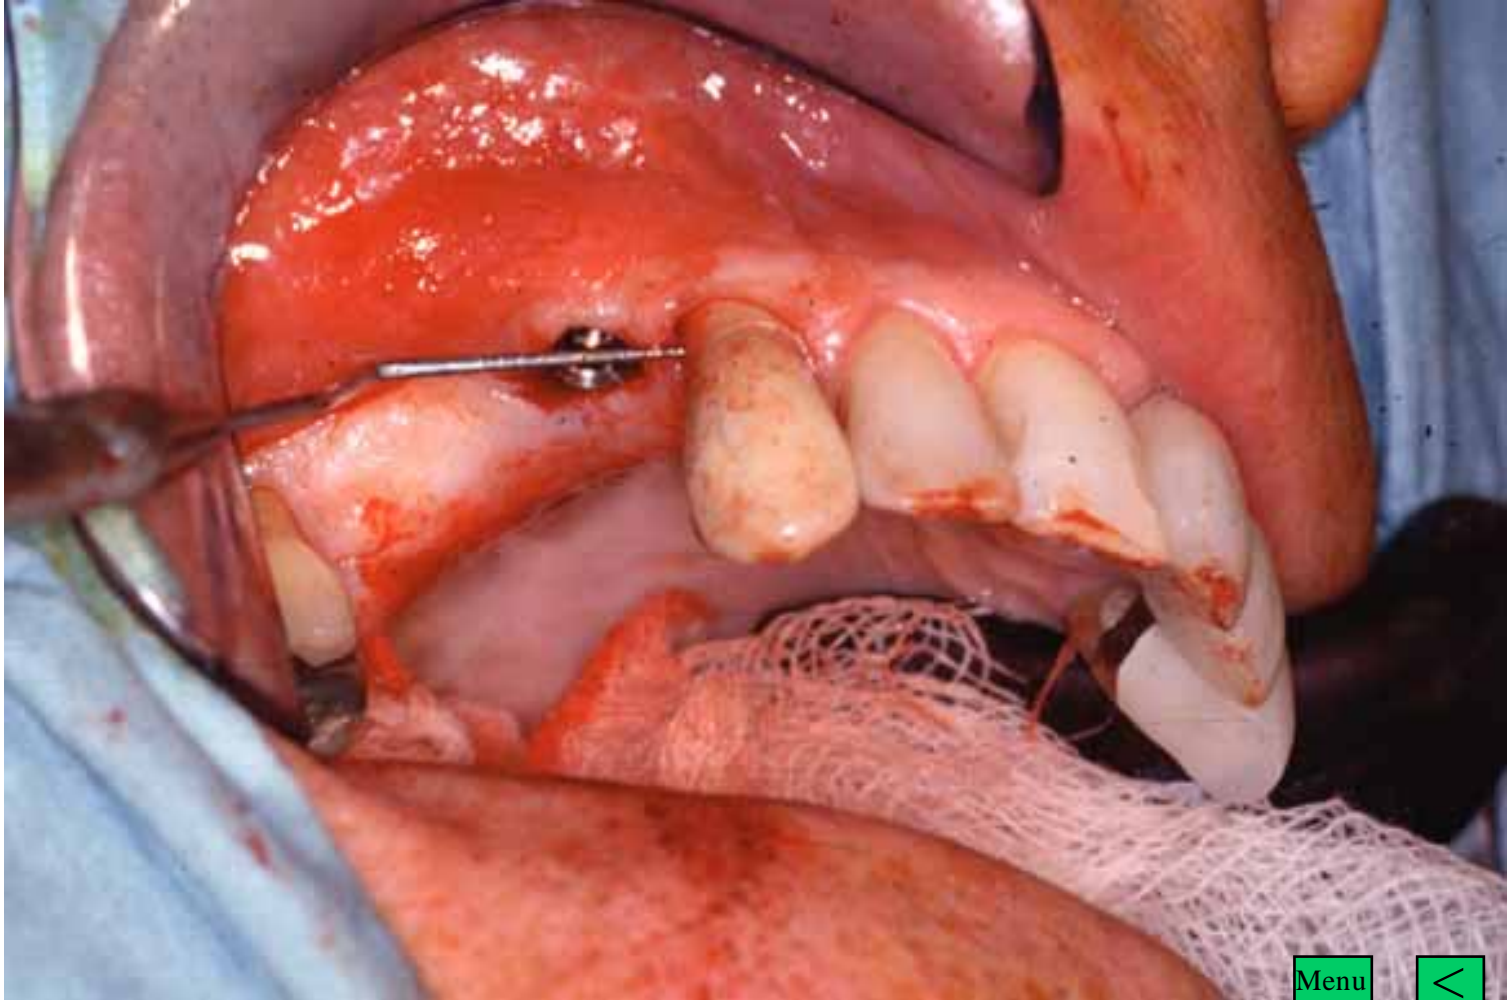


Menu



Gap Present Mesially and Distally



Adding Osteogen

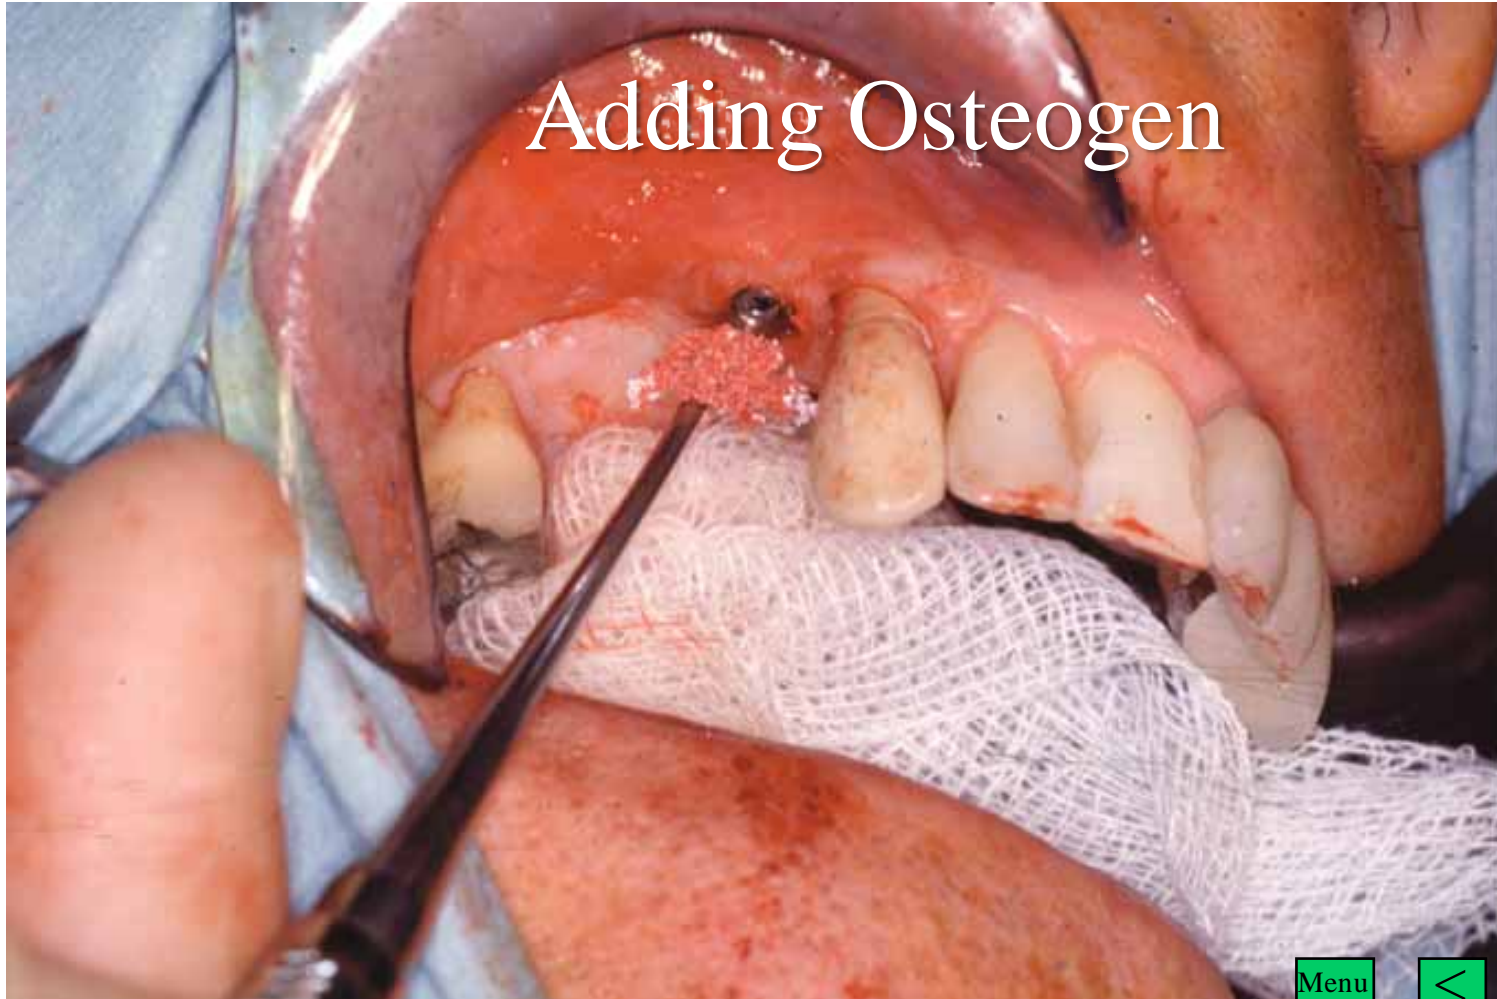

Menu







Menu



Planning the Next Implant Site

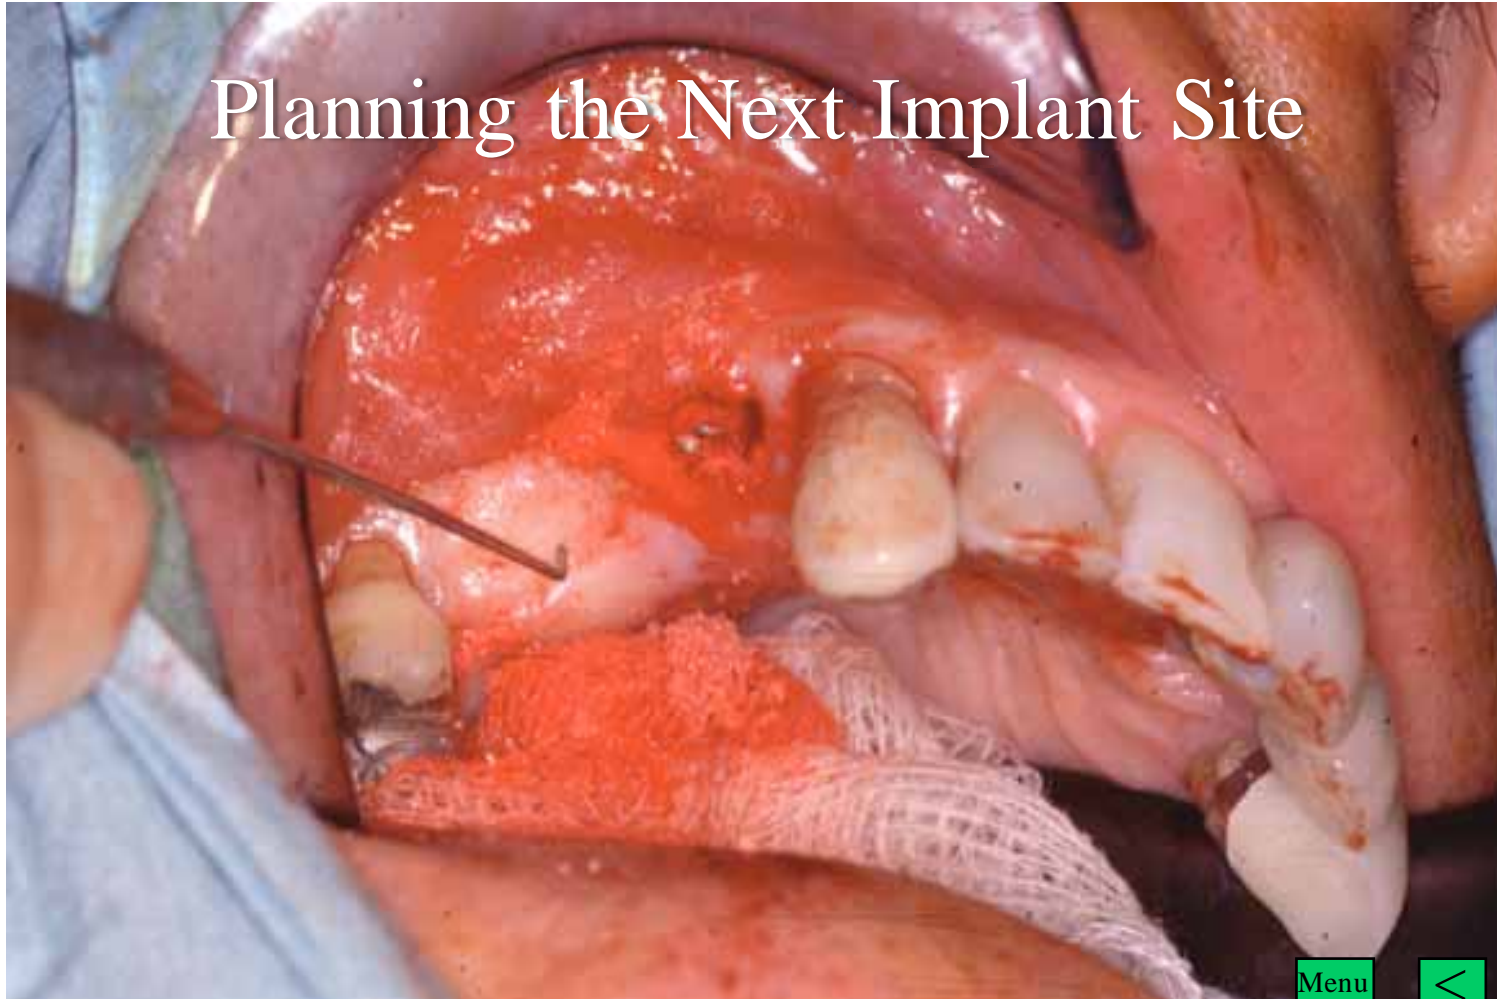

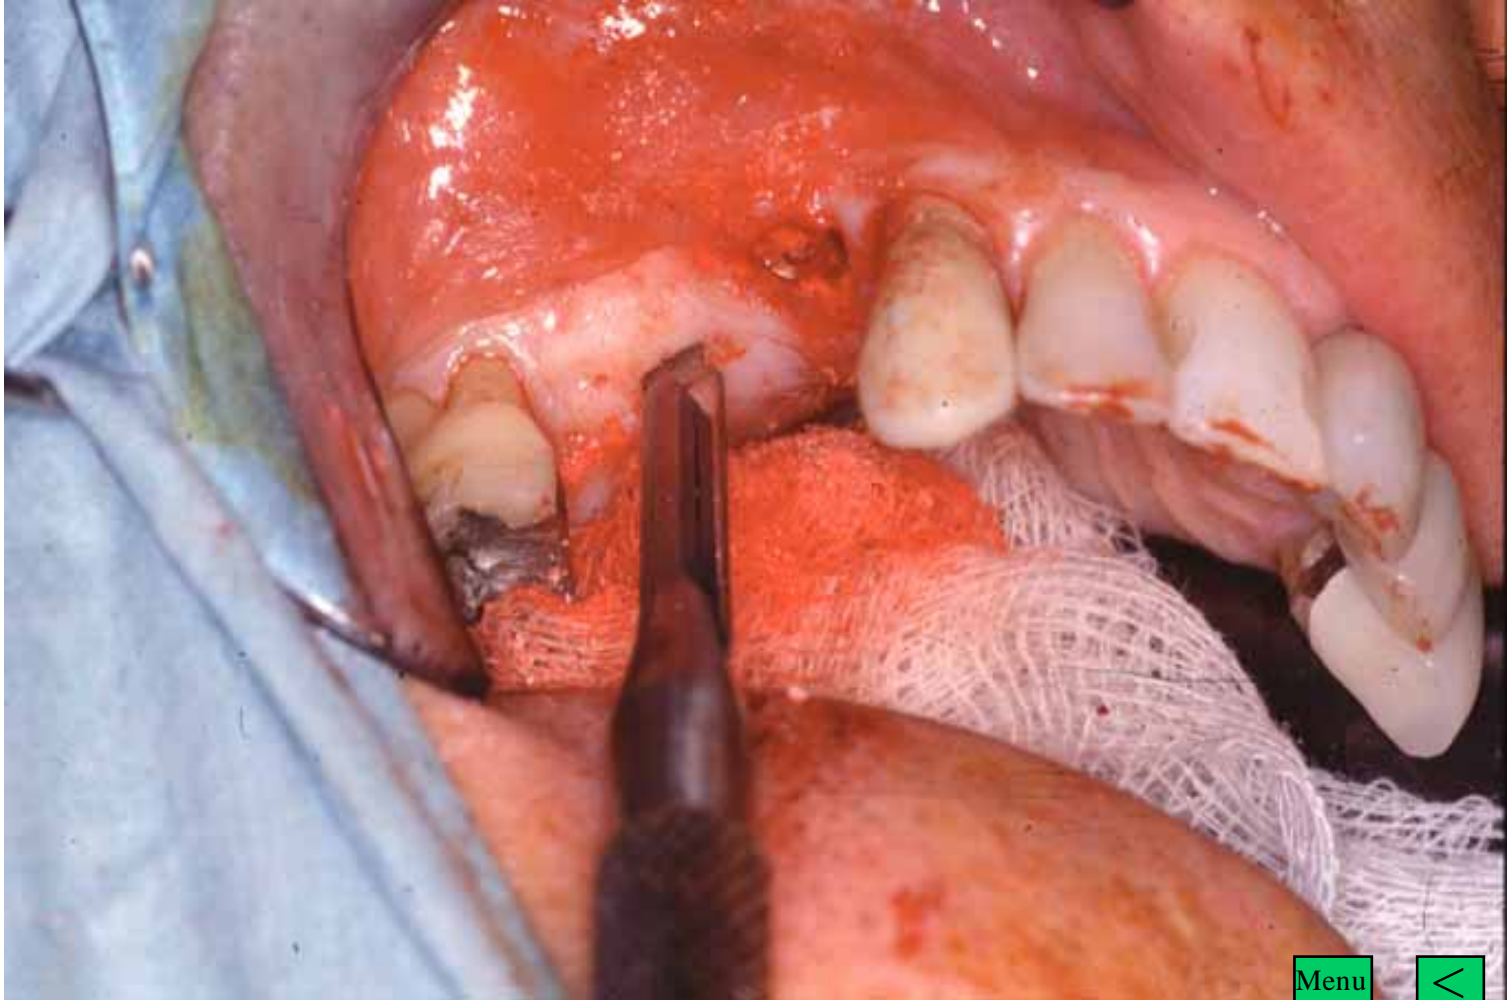

Menu








Menu





Menu




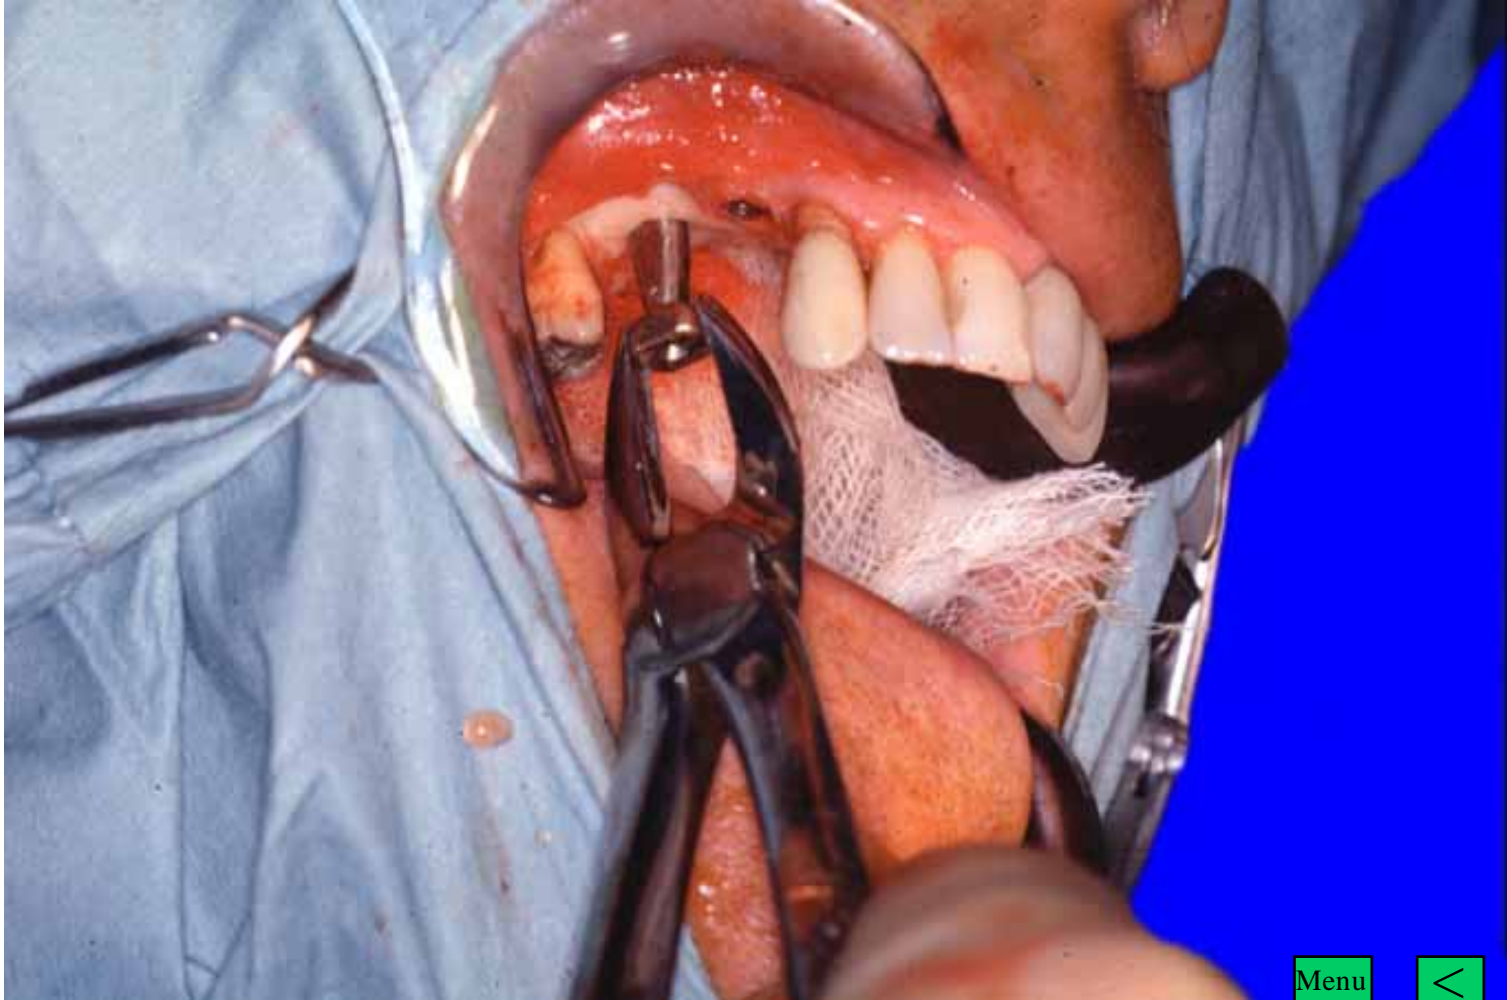



Menu



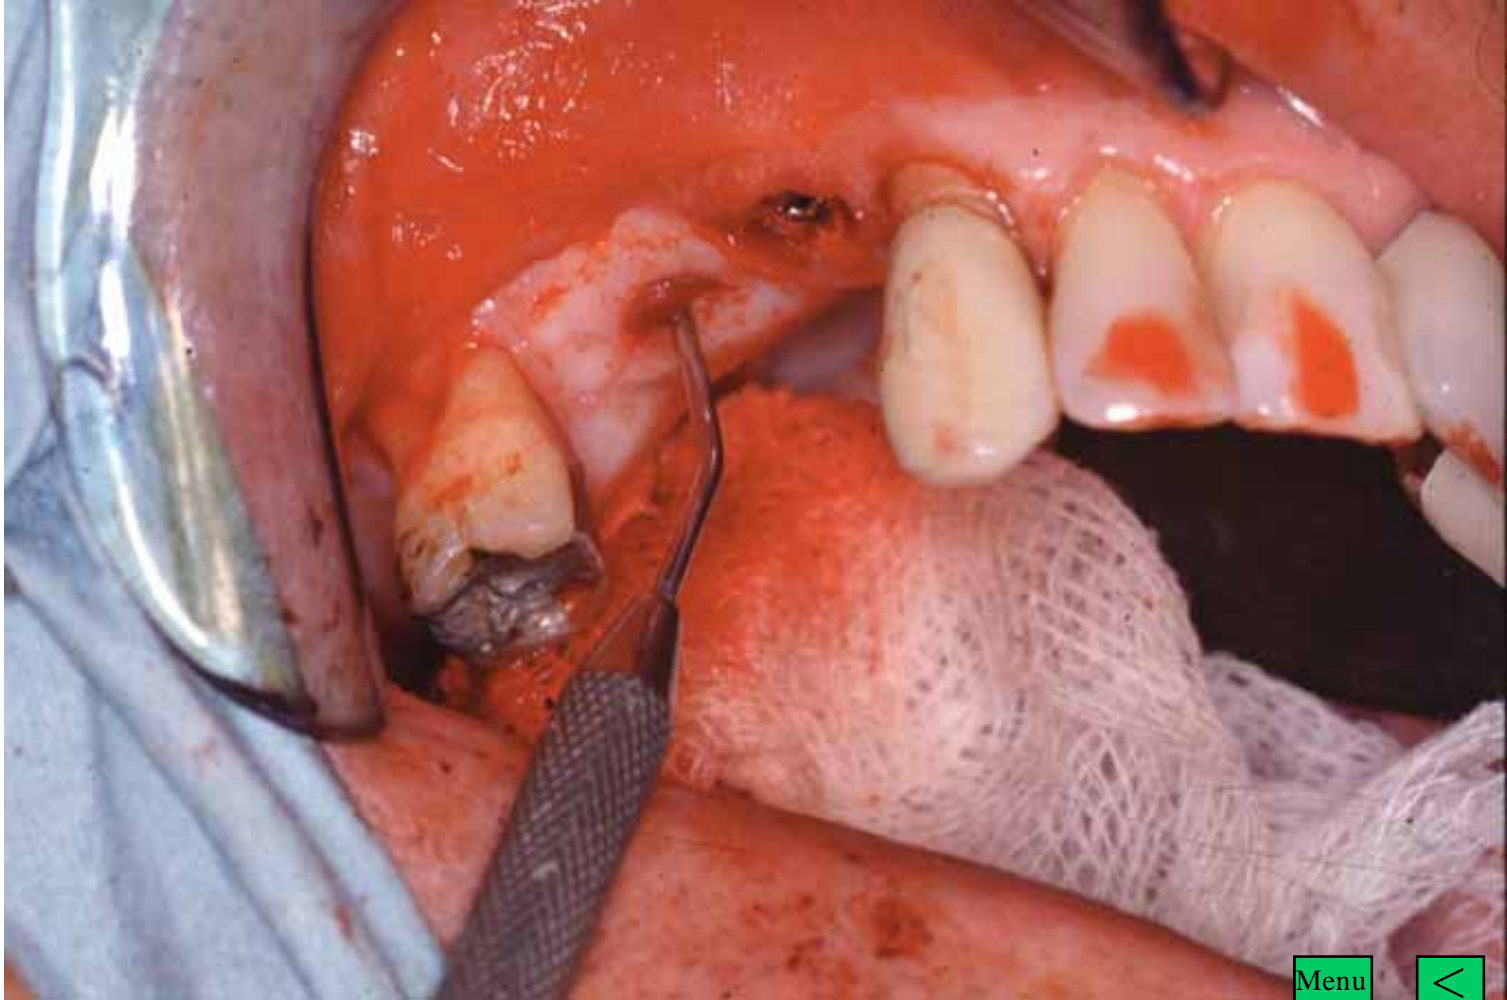


Menu





Menu



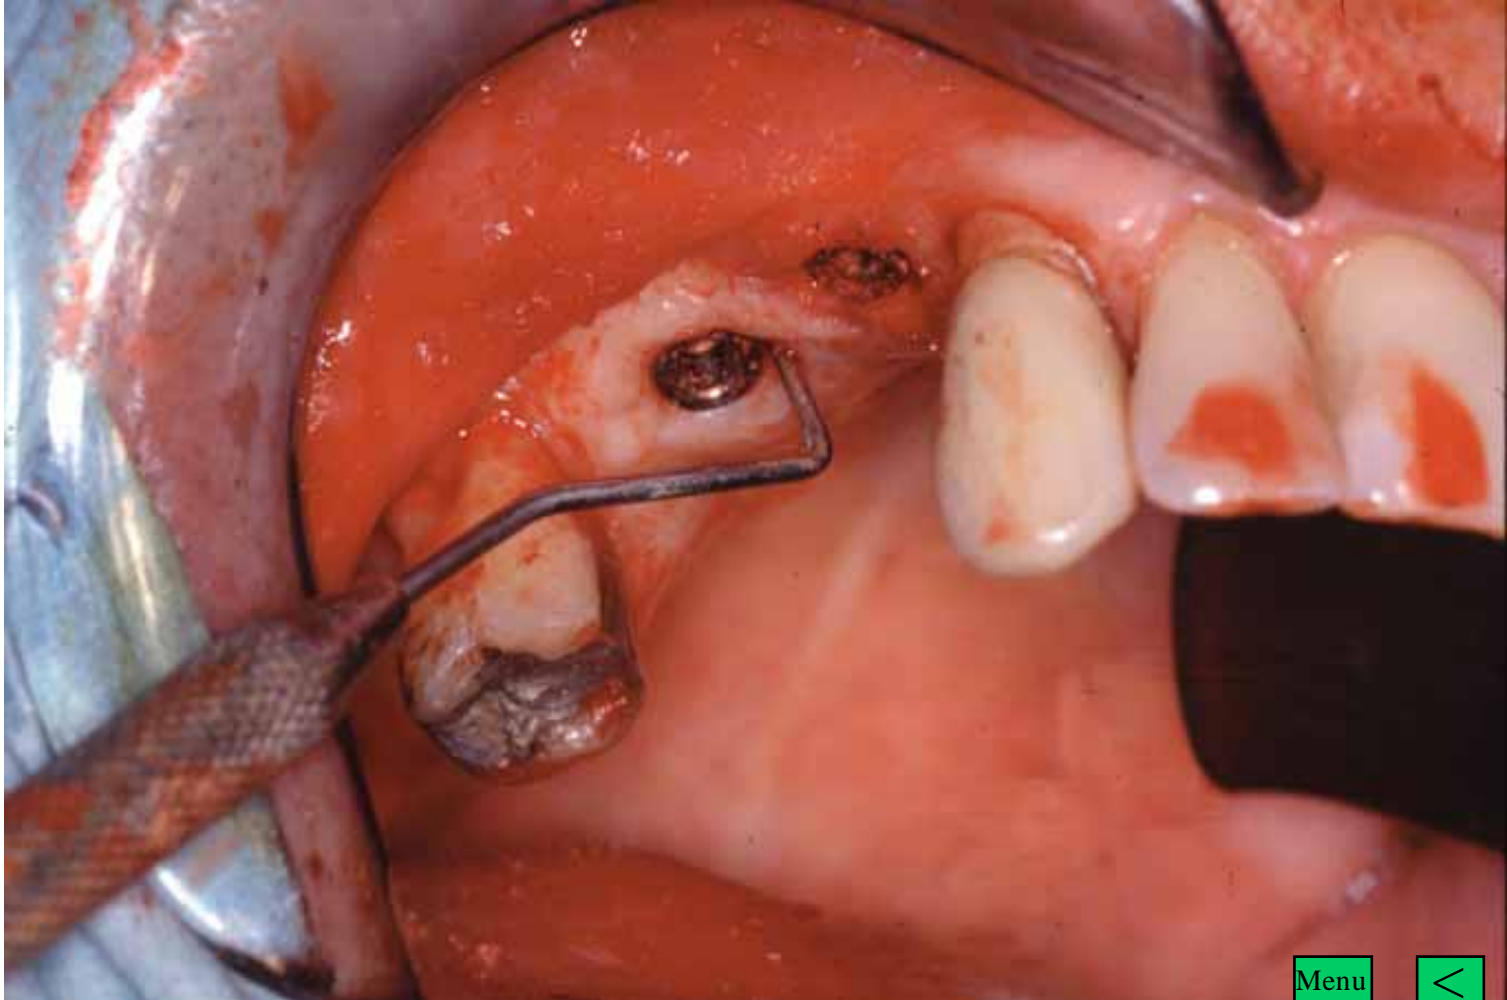

Menu



Straight Angle Guide



Menu




20 Degree Angle Guide



Menu



20 Degree Angle Guide

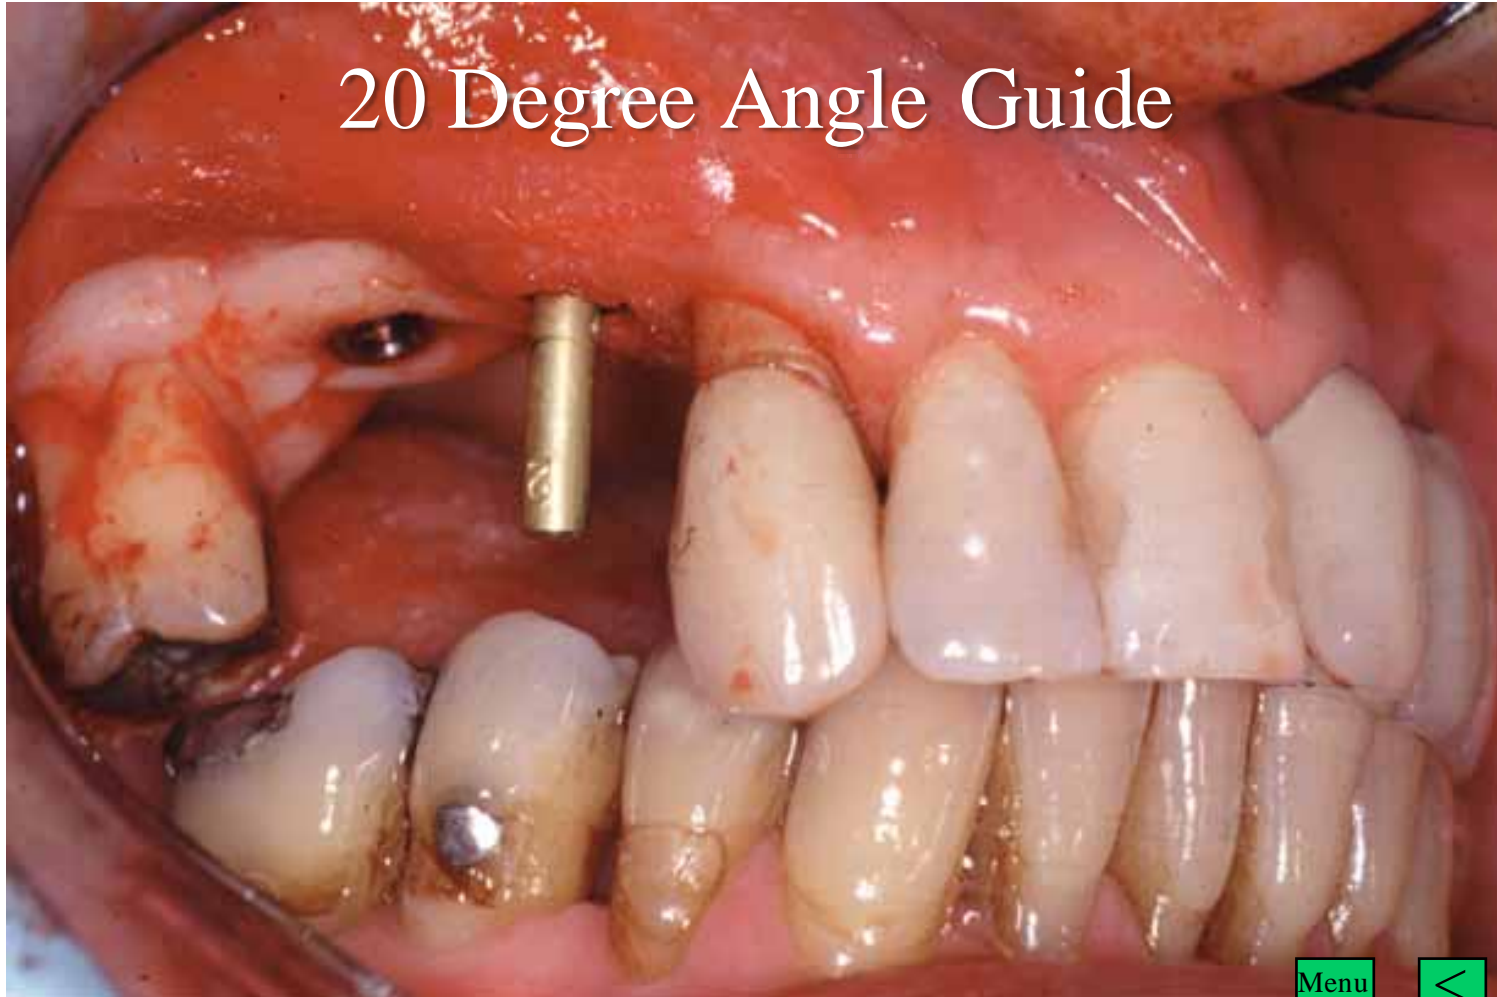

Menu




30 Degree Angle Guide




Menu




10 and 30 Degree Angle Guides

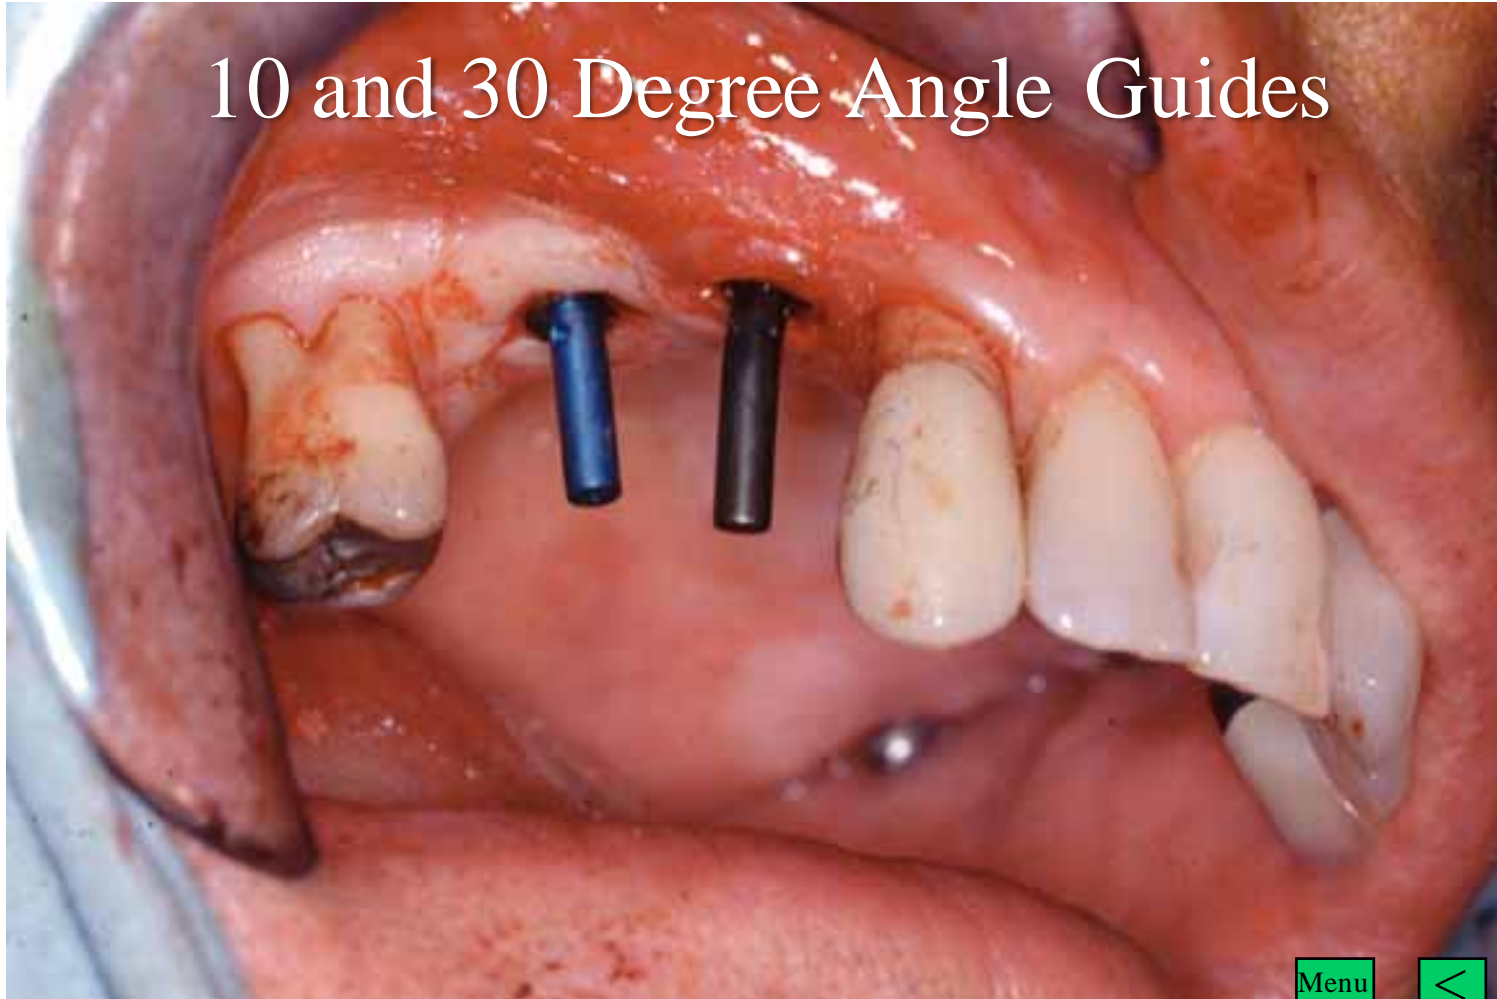

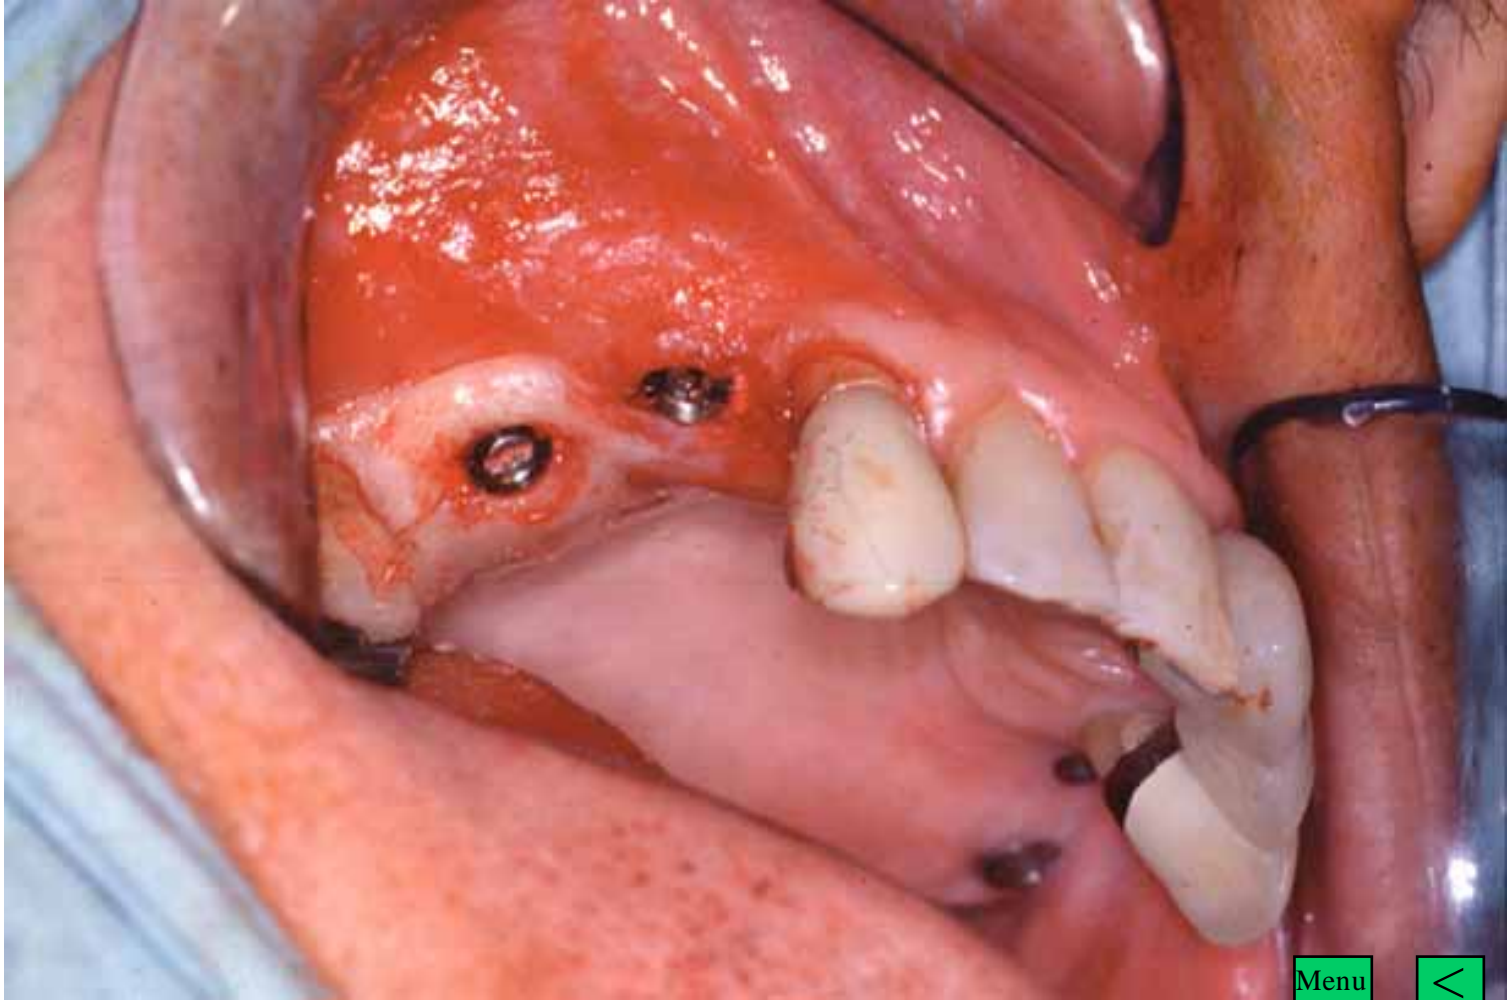

Menu



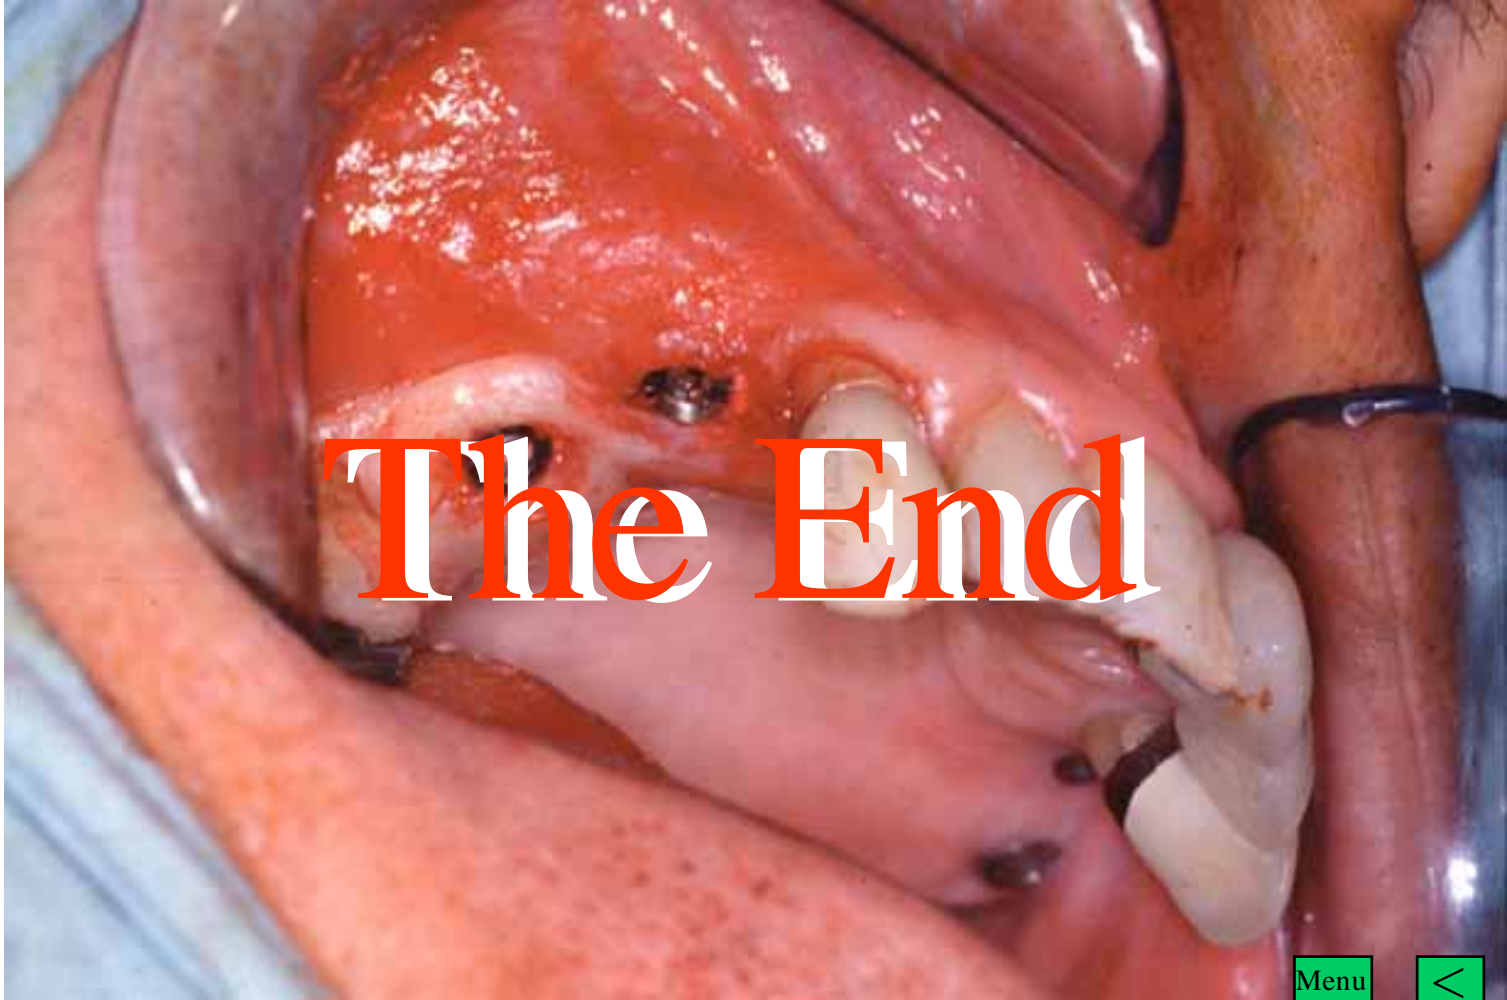

The End

Menu

